

**SRI30 / SRI60 / SRI75 / SVI85
SR220 / SR250 / SV250 / SV300
Tier 4**

Alpha Series Skid Steer Loader

**TR320 / TV380
Tier 4**

Alpha Series Compact Track Loader

SERVICE MANUAL

Part number 47465734

English

June 2013

Replaces part number 84581792



Link Product / Engine

Product	Market Product	Engine
TR320 [NCM440597 -]	North America	F5HFL413L*A001
TV380 [NCM450857 -]	North America	F5HFL413L*A001
SR130 [NDM442151 -]	North America	N844L-F-36SL
SR160	North America	N844LT-F-45SL
SR175 [NDM465633 -]	North America	N4LDI-TA-50SL
SR220 [NDM457559 -]	North America	F5HFL413H*A001
SR250 [NCM442784 -]	North America	F5HFL413L*A001
SV185 [NDM466611 -]	North America	N4LDI-TA-45SL
SV250 [NDM460776 -]	North America	F5HFL413H*A001
SV300 [NCM445399 -]	North America	F5HFL413L*A001

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.310] Aftercooler.....	10.3
[10.400] Engine cooling system	10.4
[10.414] Fan and drive	10.5
[10.501] Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment	10.6
Front axle system	25
[25.450] Chain drive system.....	25.1
Rear axle system.....	27
[27.650] Chain drive system	27.1
Hydrostatic drive.....	29
[29.100] Transmission and steering hydrostatic control	29.1
[29.134] Two-speed assembly.....	29.2
[29.200] Mechanical control	29.3
[29.218] Pump and motor components.....	29.4
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.128] Auxiliary hydraulic function control	35.4
[35.300] Reservoir, cooler, and filters.....	35.5
[35.350] Safety and main relief valves	35.6

[35.359] Main control valve	35.7
[35.600] High flow hydraulics	35.8
[35.701] Front loader arm hydraulic system	35.9
[35.723] Front loader bucket hydraulic system	35.10
[35.724] Front loader hydraulic system control	35.11
[35.734] Tool quick coupler hydraulic system	35.12
Frames and ballasting	39
[39.140] Ballasts and supports	39.1
Wheels	44
[44.511] Front wheels	44.1
[44.520] Rear wheels	44.2
Tracks and track suspension	48
[48.100] Tracks	48.1
[48.130] Track frame and driving wheels	48.2
[48.134] Track tension units	48.3
[48.138] Track rollers	48.4
Cab climate control	50
[50.100] Heating	50.1
[50.200] Air conditioning	50.2
Electrical systems	55
[55.000] Electrical system	55.1
[55.010] Fuel injection system	55.2
[55.011] Fuel tank system	55.3
[55.012] Engine cooling system	55.4
[55.013] Engine oil system	55.5
[55.014] Engine intake and exhaust system	55.6
[55.015] Engine control system	55.7
[55.019] Hydrostatic drive control system	55.8

[55.031] Parking brake electrical system	55.9
[55.036] Hydraulic system control	55.10
[55.100] Harnesses and connectors.....	55.11
[55.202] Cold start aid	55.12
[55.302] Battery.....	55.13
[55.404] External lighting	55.14
[55.415] Loader arm and bucket control system	55.15
[55.512] Cab controls.....	55.16
[55.525] Cab engine controls.....	55.17
[55.640] Electronic modules	55.18
[55.989] Exhaust Gas Recirculation (EGR) electrical system	55.19
[55.DTC] FAULT CODES.....	55.20
Front loader and bucket.....	82
[82.100] Arm.....	82.1
[82.300] Bucket.....	82.2
Platform, cab, bodywork, and decals.....	90
[90.102] Engine shields, hood latches, and trims	90.1
[90.154] Cab doors and hatches	90.2

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$