

Shop Manual

COMPACT
HYDRAULIC
EXCAVATOR

PC30MR-5
PC30MR-5E1
PC35MR-5
PC35MR-5E1

SERIAL NUMBERS

PC30MR- 5	50001
PC30MR-5E1	1001
PC35MR- 5	30001
PC35MR-5E1	2001
PC30MR- 5	DBGB0001
PC35MR- 5	DBGC0001

and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-15
Foreword, Safety, Basic Information	00-21
How to Read the Shop Manual	00-21
Safety Notice for Operation	00-23
Precautions to Prevent Fire	00-31
Procedures If Fire Occurs	00-33
Precautions When You Discard Waste Materials	00-34
Precautions When You Handle Hydraulic Equipment	00-35
Precautions When You Disconnect and Connect Pipings	00-38
Precautions When You Handle Electrical Equipment	00-45
Precautions When You Handle Fuel System Equipment	00-47
Precautions When You Handle Intake System Equipment	00-48
Practical Use of KOMTRAX	00-49
Disconnect and Connect Push-Pull Type Coupler	00-50
Precautions for Disconnection and Connection of Connectors	00-54
How to Disconnect and Connect Deutsch Connector	00-59
How to Disconnect and Connect Slide Lock Type Connector	00-60
How to Disconnect and Connect Connector with Lock to Pull	00-67
How to Disconnect and Connect Connector with Lock to Push	00-68
How to Disconnect and Connect Connector with Housing to Rotate	00-71
How to Read the Codes for Electric Cable	00-72
Explanation of Terms for Maintenance Standard	00-76
Standard Tightening Torque Table	00-79
Conversion Table	00-86
01 Specifications	01-1
Table of Contents	01-2
Abbreviation List	01-3
Specifications	01-9
Specification Drawing	01-9
Working Range Drawings	01-16
Specifications	01-22
Weight Table	01-49
Table of Fuel, Coolant, and Lubricants	01-61
10 Structure and Function	10-1
Table of Contents	10-2
Abbreviation List	10-4
Boot-up System	10-10
Layout Drawing of Boot-up System	10-10
System Operating Lamp System	10-11
Quick Release Battery Terminal (-)	10-13
Battery Disconnect Switch	10-14
Engine System	10-15
Layout Drawing of Engine System	10-15
Engine Control System	10-16
Auto-Deceleration System	10-24
Overheat Prevention System	10-26
Automatic Idle Stop System	10-28
Component Parts of Engine System	10-30
Cooling System	10-31
Layout Drawing of Cooling System	10-31
Control System	10-33
Layout Drawing of Control System	10-33
Machine Monitor System	10-34
KOMTRAX System	10-35
Component Parts of Control System	10-36

Hydraulic System	10-53
Layout Drawing of Hydraulic System.....	10-53
CLSS	10-56
Engine and Pump Combined Control System	10-59
Component Parts of Hydraulic System.....	10-62
Work Equipment System.....	10-118
Layout Drawing of Work Equipment System	10-118
Structure of Valve Control	10-121
PPC Lock System	10-123
Work Equipment and Travel Automatic Lock System	10-125
Attachment Oil Flow Adjuster System	10-126
Component Parts of Work Equipment System	10-128
Swing System	10-144
Layout Drawing of Swing System.....	10-144
Component Parts of Swing System.....	10-145
Travel System	10-153
Layout Drawing of Travel System.....	10-153
System Diagram of Travel Control System.....	10-155
Component Parts of Travel System.....	10-157
Undercarriage and Frame	10-168
Layout Drawing of Undercarriage.....	10-168
Idle Cushion.....	10-169
Work Equipment	10-170
Structure of Work Equipment	10-170
Function of Work Equipment.....	10-171
Work Equipment Clearance Adjustment Shim.....	10-172
CAB Related Parts.....	10-173
ROPS CAB	10-173
Tilt Type Floor	10-175
20 Standard Value Table	20-1
Table of Contents	20-2
Abbreviation List	20-3
Standard Value Table for Engine	20-9
Standard Value Table for Engine: PC30MR-5.....	20-9
Standard Value Table for Engine: PC30MR-5E1	20-11
Standard Value Table for Engine: PC35MR-5.....	20-13
Standard Value Table for Engine: PC35MR-5E1	20-15
Standard Value Table for Machine.....	20-17
Standard Value Table for Machine: PC30MR-5	20-17
Standard Value Table for Machine: PC30MR-5E1	20-34
Standard Value Table for Machine: PC35MR-5	20-51
Standard Value Table for Machine: PC35MR-5E1	20-66
Machine Posture and Procedures to Measure Performance	20-81
30 Testing and Adjusting	30-1
Table of Contents	30-2
Precautions Before Work	30-5
Abbreviation List	30-6
Related Information on Testing and Adjusting	30-12
Differences In Machine Monitor Symbols	30-12
Tools for Testing and Adjusting.....	30-13
Sketch of Tools for Testing and Adjusting	30-17
Engine and Cooling System	30-19
Examine Engine Speed.....	30-19
Examine Exhaust Gas Color	30-22
Examine and Adjust Valve Clearance.....	30-24
Examine Compression Pressure	30-27
Examine Engine Oil Pressure	30-30
Examine and Adjust Fuel Injection Timing.....	30-32

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$