

Shop Manual

MINI
WHEEL LOADER

WA50-8

SERIAL NUMBERS 83001 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-11
Foreword, Safety, Basic Information	00-17
How to Read the Shop Manual	00-17
Safety Notice for Operation	00-19
Precautions to Prevent Fire	00-28
Procedures If Fire Occurs	00-30
Precautions When You Dispose of Waste Materials	00-31
Precautions When You Handle Hydraulic Equipment	00-32
Precautions When You Disconnect and Connect Pipings	00-35
Precautions When You Handle Electrical Equipment	00-42
Precautions When You Handle Fuel System Equipment	00-44
Precautions When You Handle Intake System Equipment	00-45
Practical Use of KOMTRAX	00-46
Disconnect and Connect Push-Pull Type Coupler	00-47
Precautions for Disconnection and Connection of Connectors	00-51
How to Disconnect and Connect Deutsch Connector	00-56
How to Disconnect and Connect Slide Lock Type Connector	00-57
How to Disconnect and Connect Connector with Lock to Pull	00-64
How to Disconnect and Connect Connector with Lock to Push	00-65
How to Disconnect and Connect Connector with Housing to Rotate	00-68
How to Read the Codes for Electric Cable	00-69
Explanation of Terms for Maintenance Standard	00-73
Standard Tightening Torque Table	00-76
Conversion Table	00-83
01 Specifications	01-1
Table of Contents	01-2
Abbreviation List	01-3
Specifications	01-9
Specification Drawing	01-9
Specifications	01-11
Weight Table	01-15
How to Use Fuel, Coolant and Lubricants by Ambient Temperature	01-17
10 Structure and Function	10-1
Table of Contents	10-2
Abbreviation List	10-4
Boot-up System	10-10
Layout Drawing of Boot-up System	10-10
System Operating Lamp System	10-11
Battery Disconnect Switch	10-12
Engine System	10-13
Layout Drawing of Engine System	10-13
Engine Control System	10-14
Component Parts of Engine System	10-17
Cooling System	10-18
Layout Drawing of Cooling System	10-18
Control System	10-19
Layout Drawing of Control System	10-19
Machine Monitor System	10-20
KOMTRAX System	10-21
Component Parts of Control System	10-22
Hydraulic System	10-37
Layout Drawing of Hydraulic System	10-37
Component Parts of Hydraulic System	10-38
Power Train System	10-51
Layout Drawing of HST System	10-51

HST Control System	10-52
Component Parts of Power Train System.....	10-60
Work Equipment System.....	10-91
Layout Drawing of Work Equipment System	10-91
Steering System.....	10-92
Layout Drawing of Steering System	10-92
Steering Column	10-93
Component Parts of Steering System	10-94
Brake System.....	10-99
Layout Drawing of Brake System	10-99
Component Parts of Brake System	10-101
Undercarriage and Frame	10-102
Frame, Axle Mount and Center Hinge Pin	10-102
Work Equipment	10-104
Structure of Work Equipment	10-104
Structure of Bucket.....	10-105
Bucket Positioner	10-106
CAB Related Parts	10-110
ROPS CAB	10-110
ROPS Canopy	10-111
20 Standard Value Table	20-1
Table of Contents	20-2
Abbreviation List	20-3
Standard Value Table for Engine	20-9
Standard Value Table for Engine: WA50-8	20-9
Standard Value Table for Machine.....	20-11
Standard Value Table for Machine: WA50-8	20-11
Machine Posture and Procedures to Measure Performance	20-21
30 Testing and Adjusting	30-1
Table of Contents	30-2
Precautions Before Work	30-5
Abbreviation List	30-6
Related Information on Testing and Adjusting	30-12
Tools for Testing and Adjusting.....	30-12
Sketch of Tools for Testing and Adjusting	30-15
Engine and Cooling System	30-17
Examine Engine Speed.....	30-17
Examine Exhaust Gas Color	30-20
Examine and Adjust Valve Clearance.....	30-22
Examine Compression Pressure	30-27
Examine Engine Oil Pressure	30-29
Bleed Air from Fuel System.....	30-31
Examine Fuel System for Leakage.....	30-33
Handle Cylinder Cut-out Mode Operation.....	30-35
Examine and Adjust Alternator Belt Tension.....	30-36
Examine Installed Condition of Cylinder Heads and Manifolds	30-37
Examine Engine Piping for Damage and Looseness.....	30-38
Examine and Adjust Air Conditioner Compressor Belt Tension	30-39
Power Train.....	30-40
Examine and Adjust HST Oil Pressure.....	30-40
Adjust Travel Speed Sensor.....	30-48
Examine Drive Shaft for Looseness, Backlash, and Damage.....	30-49
Steering System.....	30-50
Examine Steering Wheel.....	30-50
Examine and Adjust Steering Circuit Oil Pressure.....	30-53
Bleed Air from Steering Cylinder Circuit	30-56
Brake System.....	30-57
Examine Brake Performance	30-57

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$