

Engine Manual Technical Manual

3TNV Series

3TNV88C・3TNV86CT

4TNV Series

4TNV88C・4TNV86CT・4TNV98C
4TNV98CT

 Hitachi Construction Machinery Co., Ltd.

URL:<http://www.hitachi-c-m.com>

Service Manual consists of the following sections.

Technical Manual

Technical Manual (Operational Principle)

Technical Manual (Troubleshooting)

Workshop Manual

Engine Manual

The specification and contents that are not equipped for the machine may be described in this book.

TROUBLESHOOTING MANUAL	MODEL	3TNV88C, 3TNV86CT, 4TNV88C, 4TNV86CT, 4TNV98C, 4TNV98CT
	CODE	0DTN5-EN1021

TROUBLESHOOTING MANUAL

3TNV88C, 3TNV86CT, 4TNV88C,
4TNV86CT, 4TNV98C, 4TNV98CT

CONTENTS

1. DTC (Diagnostic Trouble Codes) General Description	1
DTC code list	1
Additional requirements for EU Stage V (less than 56kW) regulations	6
Power restrictions due to inducement when NCD abnormality occurs	6
Description	8
Sensor related	9
Crankshaft speed sensor	9
P0336: Crankshaft signal error	9
P0337: No signal from crankshaft	11
Camshaft speed sensor	13
P0341: Camshaft signal error	13
P0342: No signal from camshaft	15
P1341: Angle offset error	17
P0008: Crankshaft/camshaft speed sensor non-input (simultaneous)	19
Accelerator sensor	20
P0123: Accelerator sensor 1 error (voltage high)	20
P0122: Accelerator sensor 1 error (voltage low)	22
P0223: Accelerator sensor 2 error (voltage high)	24
P0222: Accelerator sensor 2 error (voltage low)	26
P1646: Dual accelerator sensor error (closed position)	28
P1647: Dual accelerator sensor error (open position)	30
P0228: Accelerator sensor 3 error (voltage high)	32
P0227: Accelerator sensor 3 error (voltage low)	34
P1227: Pulse accelerator sensor error (pulse communication)	36
P1126: Accelerator sensor 3 error (foot pedal in open position)	37
P1125: Accelerator sensor 3 error (foot pedal in closed position)	39
Intake throttle position sensor	40
P02E9: Intake throttle position sensor error (voltage high)	40
P02E8: Intake throttle position sensor error (voltage low)	42
EGR low pressure side pressure sensor	44
P0238: EGR low pressure side pressure sensor error (excessive sensor output)	44
P0237: EGR low pressure side pressure sensor error (insufficient sensor output)	46
P0236: EGR low pressure side pressure sensor error (abnormal learning value)	48
P1673: EGR low pressure side pressure sensor error (detected value error)	50
EGR high pressure side pressure sensor	52
P0473: EGR high pressure side pressure sensor error (excessive sensor output)	52
P0472: EGR high pressure side pressure sensor error (insufficient sensor output)	54
P0471: EGR high pressure side pressure sensor error (abnormal learning value)	56
P1679: EGR high pressure side pressure sensor error (detected value error)	58
Engine coolant temperature sensor	60
P0118: Engine coolant temperature sensor error (excessive sensor output)	60
P0117: Engine coolant temperature sensor error (insufficient sensor output)	62
P1674: Engine coolant temperature sensor error (detected value error)	64
P0217: Engine coolant temperature high (overheat)	66

Ambient air temperature sensor	68
P0113: Ambient air temperature sensor error (voltage high)	68
P0112: Ambient air temperature sensor error (voltage low)	70
Fuel temperature sensor	72
P0183: Fuel temperature sensor error (voltage high)	72
P0182: Fuel temperature sensor error (voltage low)	74
P0168: Fuel temperature high	76
Rail pressure sensor	78
P0193: Rail pressure sensor error (voltage high)	78
P0192: Rail pressure sensor error (voltage low)	80
DPF differential pressure sensor	82
P2455: DPF differential pressure sensor error (excessive sensor output)	82
P2454: DPF differential pressure sensor error (insufficient sensor output)	84
P2452: DPF differential pressure sensor abnormal rise in differential pressure	86
P2453: DPF differential pressure sensor error (abnormal learning value)	88
DPF substrate/DPF differential pressure sensor	90
P226D: DPF substrate/DPF differential pressure sensor error (DPF substrate removal/DPF differential pressure sensor detected value error)	90
DPF high pressure side pressure sensor	92
P1455: DPF high pressure side pressure sensor error (excessive sensor output)	92
P1454: DPF high pressure side pressure sensor error (insufficient sensor output)	94
P167C: DPF high pressure side pressure sensor error (detected value error)	96
DPF inlet temperature sensor	98
P1428: DPF inlet temperature sensor error (excessive sensor output)	98
P1427: DPF inlet temperature sensor error (insufficient sensor output)	100
P167E: DPF inlet temperature sensor error (detected value error)	102
P1436: DPF inlet temperature sensor abnormal temperature (abnormally high)	104
DPF intermediate temperature sensor	105
P1434: DPF intermediate temperature sensor error (excessive sensor output)	105
P1435: DPF intermediate temperature sensor error (insufficient sensor output)	107
P167A: DPF intermediate temperature sensor error (detected value error)	109
P0420: DPF intermediate temperature sensor abnormal temperature (abnormally low)	111
Atmospheric pressure sensor	112
P2229: Atmospheric pressure sensor error (excessive sensor output)	112
P2228: Atmospheric pressure sensor error (insufficient sensor output)	113
P1231: Atmospheric pressure sensor error (characteristic error)	114
EGR gas temperature sensor	116
P041D: EGR gas temperature sensor error (excessive sensor output)	116
P041C: EGR gas temperature sensor error (insufficient sensor output)	118
P1675: EGR gas temperature sensor error (detected value error)	120
Intake manifold temperature sensor	122
P040D: Intake manifold temperature sensor error (excessive sensor output)	122
P040C: Intake manifold temperature sensor error (insufficient sensor output)	124
P1676: Intake manifold temperature sensor error (detected value error)	126
Exhaust manifold temperature sensor	128
P0546: Exhaust manifold temperature sensor error (excessive sensor output)	128
P0545: Exhaust manifold temperature sensor error (insufficient sensor output)	130
P1677: Exhaust manifold temperature sensor error (detected value error)	132

Contact output related	134
Main relay	134
P068B: Main relay contact sticking	134
P068A: Main relay early opening	136
Starting aid relay	138
P0543: Starting aid relay disconnection	138
P0541: Starting aid relay GND short circuit	140
CRS (common rail system) related	142
Injector (No. 1 cylinder)	142
P0201: Injector (No. 1 cylinder) disconnection (injector-specific)	142
P0262: Injector (No. 1 cylinder) coil short circuit	144
P1262: Injector (No. 1 cylinder) short circuit	146
Injector (No. 2 cylinder)	148
P0202: Injector (No. 2 cylinder) disconnection (injector-specific)	148
P0265: Injector (No. 2 cylinder) coil short circuit	150
P1265: Injector (No. 2 cylinder) short circuit	152
Injector (No. 3 cylinder)	154
P0203: Injector (No. 3 cylinder) disconnection (injector-specific)	154
P0268: Injector (No. 3 cylinder) coil short circuit	156
P1268: Injector (No. 3 cylinder) short circuit	158
Injector (No. 4 cylinder)	160
P0204: Injector (No. 4 cylinder) disconnection (injector-specific)	160
P0271: Injector (No. 4 cylinder) coil short circuit	162
P1271: Injector (No. 4 cylinder) short circuit	164
All injectors	166
P0611: Injector drive IC error	166
P1146: Injector drive circuit (Bank 1) short circuit	167
P1149: Injector drive circuit (Bank 2) short circuit	169
P1648: Injector (No. 1 cylinder) correction value error	171
P1649: Injector (No. 2 cylinder) correction value error	172
P1650: Injector (No. 3 cylinder) correction value error	173
P1651: Injector (No. 4 cylinder) correction value error	174
SCV (MPROP)	175
P1641: SCV (MPROP) L side VB short circuit	175
P1643: SCV (MPROP) L side GND short circuit	176
P0629: SCV (MPROP) H side VB short circuit	178
P1642: SCV (MPROP) H side GND short circuit	180
P0627: SCV (MPROP) disconnection	181
P062A: SCV (MPROP) drive current (high level)	182
P1645: SCV (MPROP) pump overload error	184
Rail pressure error	186
P0088: Rail pressure too high	186
P0094: Rail pressure deviation error (low rail pressure)	188
P0093: Rail pressure deviation error (high rail pressure)	190

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$