

Shop Manual

MOTOR GRADER

GD655-6

GD675-6

GD675-6E0

SERIAL NUMBERS

GD655-60001

GD675-60001

and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-22
Foreword, Safety, Basic Information	00-28
How to Read the Shop Manual	00-28
Safety Notice for Operation	00-30
Precautions to Prevent Fire	00-38
Procedures If Fire Occurs	00-40
Precautions for Disposing of Waste Materials	00-41
Engine Technology to Conform Exhaust Gas Emission	00-42
Precautions for DEF	00-43
Store DEF	00-44
Precautions When You Handle Hydraulic Equipment	00-45
Precautions When You Disconnect and Connect Pipings	00-48
Precautions When You Handle Electrical Equipment	00-55
Precautions When You Handle Fuel System Equipment	00-57
Precautions When You Handle Intake System Equipment	00-58
Practical Use of KOMTRAX	00-59
Disconnect and Connect Push-Pull Type Coupler	00-60
Precautions for Disconnection and Connection of Connectors	00-64
How to Disconnect and Connect Deutsch Connector	00-69
How to Disconnect and Connect Slide Lock Type Connector	00-70
How to Disconnect and Connect Connector with Lock to Pull	00-77
How to Disconnect and Connect Connector with Lock to Push	00-78
How to Disconnect and Connect Connector with Housing to Rotate	00-81
How to Read the Codes for Electric Cable	00-82
Explanation of Terms for Maintenance Standard	00-86
Standard Tightening Torque Table	00-89
Conversion Table	00-96
01 Specifications	01-1
Table of Contents	01-2
Abbreviation List	01-3
Specifications	01-9
Specification Drawing	01-9
Specifications	01-15
Weight Table	01-33
Table of Fuel, Coolant, and Lubricants	01-36
10 Structure and Function	10-1
Table of Contents	10-2
Abbreviation List	10-6
Urea SCR System	10-12
Layout Drawing of Urea SCR System	10-12
Urea SCR System Diagram	10-15
Function of Urea SCR System	10-16
Component Parts of Urea SCR System	10-39
Boot-up System	10-49
Layout Drawing of Boot-up System	10-49
System Operating Lamp System	10-50
Battery Disconnect Switch	10-53
Preheating System	10-56
Engine System	10-58
Layout Drawing of Engine System	10-58
Engine Control System	10-61
Engine Power Mode Selector System	10-64
Automatic Idle Stop System	10-65
Component Parts of Engine System	10-66
Cooling System	10-85

Layout Drawing of Cooling System	10-85
Cooling Fan Control System	10-89
Component Parts of Cooling System	10-92
Control System	10-101
Layout Drawing of Control System	10-101
Machine Monitor System.....	10-104
Rearview Monitor System	10-106
KOMTRAX System	10-107
Component Parts of Control System	10-109
Hydraulic System	10-162
Layout Drawing of Hydraulic System.....	10-162
Hydraulic System Diagram.....	10-164
CLSS	10-167
Component Parts of Hydraulic System.....	10-170
Power Train System.....	10-210
Layout Drawing of Power Train System	10-210
Operation of Power Train System	10-212
Automatic Shift Control System.....	10-213
Transmission Control System.....	10-214
Transmission Gear Shift Control System.....	10-218
Transmission Protection Function	10-220
Component Parts of Power Train System.....	10-221
Work Equipment System.....	10-274
Layout Drawing of Work Equipment System	10-274
Function of Work Equipment System	10-277
Component Parts of Work Equipment System	10-278
Steering System.....	10-287
Layout Drawing of Steering System	10-287
Function of Steering System	10-290
Component Parts of Steering System	10-291
Brake System.....	10-306
Layout Drawing of Brake System	10-306
Component Parts of Brake System	10-308
Undercarriage and Frame	10-319
Frame and Center Hinge Pin.....	10-319
Tires.....	10-321
Work Equipment	10-323
Structure of Circle and Drawbar	10-323
Function of Circle and Drawbar.....	10-324
Structure of Blade	10-325
Function of Blade	10-326
Structure of Lifter	10-327
Function of Lifter	10-328
CAB Related Parts.....	10-329
ROPS CAB	10-329
20 Standard Value Table	20-1
Table of Contents	20-2
Abbreviation List	20-3
Standard Value Table for Engine	20-9
Standard Value Table for Engine: GD655-6.....	20-9
Standard Value Table for Engine: GD675-6.....	20-13
Standard Value Table for Engine: GD675-6E0	20-17
Standard Value Table for Machine.....	20-21
Standard Value Table for Machine: GD655-6	20-21
Standard Value Table for Machine: GD675-6	20-39
Standard Value Table for Machine: GD675-6E0	20-57
Machine Posture and Procedures to Measure Performance	20-75
Standard Value Table for Electricity	20-76

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$