

OPTUM 270 CVX AFS Connect™
OPTUM 300 CVX AFS Connect™
OPTUM 340 CVX AFS Connect™

Tractor

*PIN DBDPT****PDP50001 and after*

SERVICE MANUAL

Part number 92303675

English
September 2024





SERVICE MANUAL

OPTUM 270 CVX AFS Connect™ CVXDrive™ - STAGE V
[DBDPT270*PDP50001 -]

OPTUM 300 CVX AFS Connect™ CVXDrive™ - STAGE V
[DBDPT300*PDP50001 -]

OPTUM 340 CVX AFS Connect™ CVXDrive™ - STAGE V
[DBDPT340*PDP50001 -]

Link Product / Engine

Product	Market Product	Engine
OPTUM 270 CVX AFS Connect™ CVXDrive™ - STAGE V [DBDPT270*PDP50001 -]	North America	F4DGE617E*V007
OPTUM 300 CVX AFS Connect™ CVXDrive™ - STAGE V [DBDPT300*PDP50001 -]	North America	F4DGE617D*V017
OPTUM 340 CVX AFS Connect™ CVXDrive™ - STAGE V [DBDPT340*PDP50001 -]	North America	F4DGE617Z*V003

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.103] Crankshaft and flywheel.....	10.2
[10.216] Fuel tanks	10.3
[10.202] Air cleaners and lines	10.4
[10.254] Intake and exhaust manifolds and muffler	10.5
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.6
[10.400] Engine cooling system	10.7
[10.414] Fan and drive	10.8
[10.310] Aftercooler.....	10.9
Clutch	18
[18.112] Slip clutch or flywheel damper	18.1
Transmission.....	21
[21.000] Transmission	21.1
[21.504] Continuously Variable Transmission (CVT)	21.2
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.3
[21.506] Continuously Variable Transmission (CVT) hydraulic components	21.4
[21.507] Continuously Variable Transmission (CVT) internal components.....	21.5
[21.109] Transmission cooler and lines.....	21.6
Four-Wheel Drive (4WD) system	23
[23.000] Four-Wheel Drive (4WD) system	23.1
[23.202] Electro-hydraulic control	23.2
[23.314] Drive shaft.....	23.3
Front axle system	25
[25.000] Front axle system	25.1

[25.100] Powered front axle	25.2
[25.102] Front bevel gear set and differential	25.3
[25.108] Final drive hub, steering knuckles, and shafts	25.4
[25.122] Axle suspension control	25.5
Rear axle system.....	27
[27.000] Rear axle system.....	27.1
[27.100] Powered rear axle.....	27.2
[27.106] Rear bevel gear set and differential	27.3
[27.120] Planetary and final drives	27.4
Power Take-Off (PTO).....	31
[31.000] Power Take-Off (PTO).....	31.1
[31.104] Rear electro-hydraulic control	31.2
[31.119] Four-speed rear Power Take-Off (PTO).....	31.3
[31.146] Front Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.000] Brakes and controls	33.1
[33.202] Hydraulic service brakes	33.2
[33.110] Parking brake or parking lock	33.3
[33.220] Trailer brake hydraulic control.....	33.4
[33.224] Trailer brake pneumatic control	33.5
[33.204] Front axle brake	33.6
[33.200] Brake cooling.....	33.7
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.106] Variable displacement pump	35.3
[35.105] Charge pump.....	35.4
[35.230] Priority valves	35.5

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$