

Shop Manual

PC360LC-11

PC390LC-11

HYDRAULIC EXCAVATOR

SERIAL NUMBERS **PC360LC-11 A35001 and up**
 PC390LC-11 A30401 and up

ENGINE **6D114E-5**

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2017 Komatsu
Printed in U.S.A.
Komatsu America Corp.

February 2017

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-19
FOREWORD, SAFETY, BASIC INFORMATION	00-25
HOW TO READ THE SHOP MANUAL	00-25
SAFETY NOTICE FOR OPERATION	00-27
PRECAUTIONS TO PREVENT FIRE	00-35
ACTIONS IF FIRE OCCURS	00-37
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-38
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-39
PRECAUTIONS FOR DEF	00-40
STORE AdBlue/DEF	00-41
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-42
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-45
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-51
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-53
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-54
PRACTICAL USE OF KOMTRAX	00-55
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-56
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-60
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-64
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-65
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-67
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-68
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-70
HOW TO READ ELECTRICAL WIRE CODE	00-71
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-75
STANDARD TIGHTENING TORQUE TABLE	00-78
CONVERSION TABLE	00-85
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
WORKING RANGE DRAWINGS	01-11
SPECIFICATIONS	01-12
WEIGHT TABLE	01-16
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-18
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-5
UREA SCR SYSTEM	10-11
LAYOUT DRAWING OF UREA SCR SYSTEM	10-11
UREA SCR SYSTEM DIAGRAM	10-15
FUNCTION OF UREA SCR SYSTEM	10-16
COMPONENT PARTS OF UREA SCR SYSTEM	10-33
BOOT-UP SYSTEM	10-42
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-42
SYSTEM OPERATING LAMP SYSTEM	10-44
BATTERY DISCONNECT SWITCH	10-46
ENGINE SYSTEM	10-47
LAYOUT DRAWING OF ENGINE SYSTEM	10-47
ENGINE CONTROL SYSTEM	10-49
AUTO-DECELERATION SYSTEM	10-52
ENGINE AUTOMATIC WARM-UP SYSTEM	10-54
OVERHEAT PREVENTION SYSTEM	10-56

TURBOCHARGER PROTECTION SYSTEM	10-58
AUTOMATIC IDLE STOP SYSTEM	10-60
COMPONENT PARTS OF ENGINE SYSTEM	10-63
COOLING SYSTEM	10-79
LAYOUT DRAWING OF COOLING SYSTEM	10-79
CONTROL SYSTEM	10-81
LAYOUT DRAWING OF CONTROL SYSTEM	10-81
MACHINE MONITOR SYSTEM	10-84
KOMTRAX SYSTEM	10-86
COMPONENT PARTS OF CONTROL SYSTEM	10-87
HYDRAULIC SYSTEM	10-116
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-116
CLSS	10-119
ENGINE AND PUMP COMBINED CONTROL SYSTEM	10-138
PUMP AND VALVE CONTROL SYSTEM	10-144
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-147
WORK EQUIPMENT SYSTEM	10-233
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-233
STRUCTURE OF VALVE CONTROL	10-239
PPC LEVERS	10-241
SWING SYSTEM	10-277
TRAVEL SYSTEM	10-298
UNDERCARRIAGE AND FRAME	10-324
WORK EQUIPMENT	10-326
CAB AND ITS ATTACHMENTS	10-328
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: PC360LC-11, PC390LC-11	20-9
STANDARD VALUE TABLE FOR MACHINE	20-14
STANDARD VALUE TABLE FOR MACHINE: PC360LC-11, PC390LC-11	20-14
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-29
STANDARD VALUE TABLE FOR ELECTRICAL	20-33
STANDARD VALUE TABLE FOR ELECTRICAL	20-33
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
ABBREVIATION LIST	30-5
RELATED INFORMATION ON TESTING AND ADJUSTING	30-11
TOOLS FOR TESTING AND ADJUSTING	30-11
SKETCH OF TOOLS FOR TESTING AND ADJUSTING	30-17
ENGINE AND COOLING SYSTEM	30-19
TEST ENGINE SPEED	30-19
TEST BOOST PRESSURE	30-23
TEST EXHAUST GAS COLOR	30-25
TEST AND ADJUST VALVE CLEARANCE	30-27
TEST COMPRESSION PRESSURE	30-30
TEST BLOWBY PRESSURE	30-33
TEST ENGINE OIL PRESSURE	30-35
TEST EGR VALVE AND VGT OIL PRESSURE	30-37
TEST FUEL PRESSURE	30-39
TEST FUEL DISCHARGE, RETURN AND LEAKAGE	30-46
BLEED AIR FROM FUEL SYSTEM	30-53
TEST FUEL CIRCUIT FOR LEAKAGE	30-54
HANDLE CYLINDER CUT-OUT MODE OPERATION	30-56
HANDLE NO-INJECTION CRANKING OPERATION	30-57
TEST AND ADJUST AIR CONDITIONER COMPRESSOR BELT TENSION	30-58
WRITING CORRECTION FOR ASH IN SOOT ACCUMULATION TO ENGINE CONTROLLER	30-60

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$