

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC360LC-11E0***  
***PC390LC-11E0***

SERIAL NUMBERS      PC360LC-92143      and up  
PC390LC-94001

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

|                                                                      |       |
|----------------------------------------------------------------------|-------|
| 00 Index and Foreword .....                                          | 00-1  |
| Abbreviation List .....                                              | 00-20 |
| Foreword, Safety, Basic Information .....                            | 00-23 |
| How to Read the Shop Manual .....                                    | 00-23 |
| Safety Notice for Operation .....                                    | 00-25 |
| Precautions to Prevent Fire .....                                    | 00-33 |
| Procedures If Fire Occurs .....                                      | 00-35 |
| Precautions for Disposing of Waste Materials .....                   | 00-36 |
| Actions Taken to Meet Exhaust Gas Regulations .....                  | 00-37 |
| How to Examine Engine Type .....                                     | 00-38 |
| Precautions for DEF .....                                            | 00-40 |
| Store DEF .....                                                      | 00-41 |
| Precautions When You Handle Hydraulic Equipment .....                | 00-42 |
| Precautions When You Disconnect and Connect Pipings .....            | 00-45 |
| Precautions When You Handle Electrical Equipment .....               | 00-52 |
| Precautions When You Handle Fuel System Equipment .....              | 00-54 |
| Precautions When You Handle Intake System Equipment .....            | 00-55 |
| Practical Use of KOMTRAX .....                                       | 00-56 |
| Disconnect and Connect Push-Pull Type Coupler .....                  | 00-57 |
| Precautions for Disconnection and Connection of Connectors .....     | 00-61 |
| How to Disconnect and Connect Deutsch Connector .....                | 00-66 |
| How to Disconnect and Connect Slide Lock Type Connector .....        | 00-67 |
| How to Disconnect and Connect Connector with Lock to Pull .....      | 00-74 |
| How to Disconnect and Connect Connector with Lock to Push .....      | 00-75 |
| How to Disconnect and Connect Connector with Housing to Rotate ..... | 00-78 |
| How to Read the Codes for Electric Cable .....                       | 00-79 |
| Explanation of Terms for Maintenance Standard .....                  | 00-83 |
| Standard Tightening Torque Table .....                               | 00-86 |
| Conversion Table .....                                               | 00-93 |
| 01 Specifications .....                                              | 01-1  |
| Table of Contents .....                                              | 01-2  |
| Specifications .....                                                 | 01-3  |
| Specification Drawing .....                                          | 01-3  |
| Working Range Drawings .....                                         | 01-7  |
| Specifications .....                                                 | 01-10 |
| Weight Table .....                                                   | 01-19 |
| How to Use Fuel, Coolant and Lubricants by Ambient Temperature ..... | 01-24 |
| 10 Structure and Function .....                                      | 10-1  |
| Table of Contents .....                                              | 10-2  |
| Urea SCR System .....                                                | 10-6  |
| Layout Drawing of Urea SCR System (Turkish Specifications) .....     | 10-6  |
| Layout Drawing of Urea SCR System (Chilean Specifications) .....     | 10-10 |
| Urea SCR System Diagram .....                                        | 10-14 |
| Function of Urea SCR System .....                                    | 10-15 |
| Component Parts of Urea SCR System .....                             | 10-39 |
| Boot-up System .....                                                 | 10-48 |
| Layout Drawing of Boot-up System .....                               | 10-48 |
| System Operating Lamp System .....                                   | 10-50 |
| Battery Disconnect Switch .....                                      | 10-52 |
| Engine System .....                                                  | 10-53 |
| Layout Drawing of Engine System .....                                | 10-53 |
| Engine Control System .....                                          | 10-55 |
| Auto-Deceleration System .....                                       | 10-57 |
| Engine Automatic Warm-up System .....                                | 10-59 |
| Overheat Prevention System .....                                     | 10-61 |
| Turbocharger Protection System .....                                 | 10-63 |

|                                                             |        |
|-------------------------------------------------------------|--------|
| Automatic Idle Stop System .....                            | 10-65  |
| Component Parts of Engine System .....                      | 10-68  |
| Cooling System.....                                         | 10-84  |
| Layout Drawing of Cooling System .....                      | 10-84  |
| Control System .....                                        | 10-86  |
| Layout Drawing of Control System .....                      | 10-86  |
| Machine Monitor System.....                                 | 10-89  |
| KomVision System.....                                       | 10-90  |
| KOMTRAX System .....                                        | 10-94  |
| Component Parts of Control System .....                     | 10-95  |
| Sensor .....                                                | 10-137 |
| Hydraulic System .....                                      | 10-149 |
| Layout Drawing of Hydraulic System.....                     | 10-149 |
| CLSS .....                                                  | 10-152 |
| Engine and Pump Combined Control System .....               | 10-172 |
| Pump and Valve Control System.....                          | 10-178 |
| Component Parts of Hydraulic System.....                    | 10-181 |
| Work Equipment System.....                                  | 10-268 |
| Layout Drawing of Work Equipment System .....               | 10-268 |
| Structure of Valve Control .....                            | 10-274 |
| One-Touch Power Maximizing System.....                      | 10-276 |
| Machine Push-up System .....                                | 10-278 |
| PPC Lock System .....                                       | 10-280 |
| Work Equipment and Travel Automatic Lock System .....       | 10-281 |
| Attachment Oil Flow Adjuster System .....                   | 10-283 |
| Component Parts of Work Equipment System .....              | 10-285 |
| Swing System .....                                          | 10-303 |
| Layout Drawing of Swing System.....                         | 10-303 |
| Swing Control System Diagram .....                          | 10-306 |
| Component Parts of Swing System.....                        | 10-310 |
| Travel System .....                                         | 10-324 |
| Layout Drawing of Travel System.....                        | 10-324 |
| System Diagram of Travel Control System.....                | 10-328 |
| Component Parts of Travel System.....                       | 10-330 |
| Undercarriage and Frame (PC360LC-11E0) .....                | 10-367 |
| Layout Drawing of Undercarriage (PC360LC-11E0).....         | 10-367 |
| Undercarriage and Frame (PC390LC-11E0) .....                | 10-369 |
| Layout Drawing of Undercarriage (PC390LC-11E0).....         | 10-369 |
| Work Equipment .....                                        | 10-370 |
| Structure of Work Equipment .....                           | 10-370 |
| Function of Work Equipment.....                             | 10-371 |
| Work Equipment Clearance Adjustment Shim.....               | 10-372 |
| Bucket Clearance Adjustment Shim .....                      | 10-373 |
| CAB Related Parts.....                                      | 10-374 |
| ROPS CAB .....                                              | 10-374 |
| CAB Mount .....                                             | 10-375 |
| CAB Tipping Stopper .....                                   | 10-376 |
| 20 Standard Value Table .....                               | 20-1   |
| Table of Contents .....                                     | 20-2   |
| Standard Value Table for Engine .....                       | 20-3   |
| Standard Value Table for Engine: PC360LC-11E0.....          | 20-3   |
| Standard Value Table for Engine: PC390LC-11E0.....          | 20-8   |
| Standard Value Table for Machine.....                       | 20-13  |
| Standard Value Table for Machine: PC360LC-11E0 .....        | 20-13  |
| Standard Value Table for Machine: PC390LC-11E0 .....        | 20-27  |
| Machine Posture and Procedures to Measure Performance ..... | 20-41  |
| 30 Testing and Adjusting .....                              | 30-1   |
| Table of Contents .....                                     | 30-2   |

It's a preview. You can download the full file by clicking the link below.

**<https://shop servicemanual.com/>**

Service Manuals from 2\$