

316




Bobcat®

Service Manual

S/N 522811001 & Above

S/N 522911001 & Above

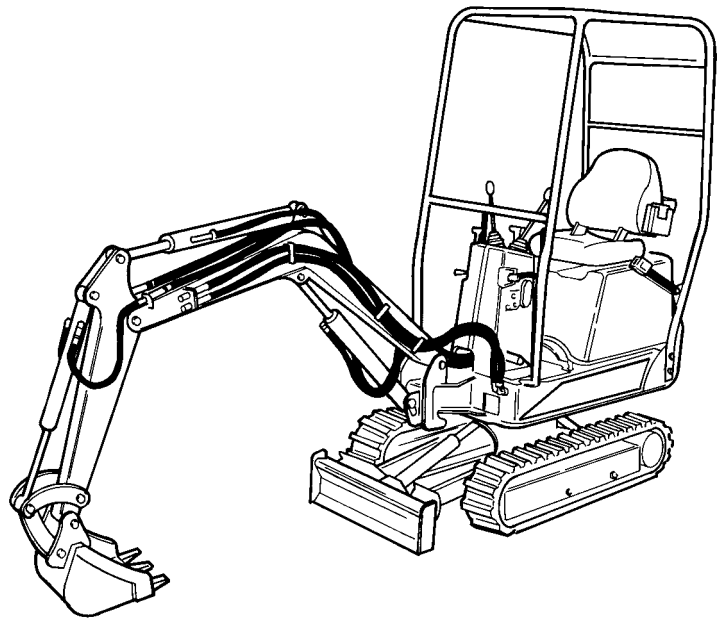

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.



Printed in U.S.A.

© Bobcat Company 2006

MAINTENANCE SAFETY



WARNING


Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT

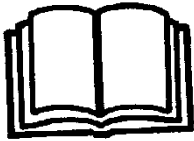

B-10731a

- Never service the Bobcat Hydraulic Excavator without instructions.

CORRECT



B-15797

- Use the correct procedure to lift and support the excavator.
- Always lift the blade fully before installing jackstands.

CORRECT



B-15798

- Cleaning and maintenance are required daily.


WRONG



B-15799

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.


WRONG

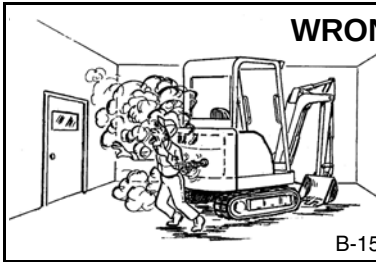

B-15800

- Vent exhaust to outside when engine must be run for service.
- Exhaust system must be tightly sealed. Exhaust Fumes can kill without warning.


WRONG

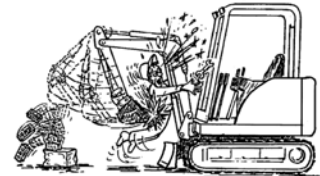

B-15801

- Always lower the bucket and blade to the ground before doing any maintenance.
- Never modify equipment or add attachments not approved by Bobcat Company.

WRONG

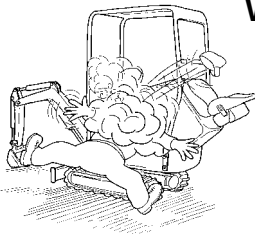

B-19806

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust machine with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

WRONG



B-19807

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep side access covers closed except for service.

WRONG



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	10-01, 60-01	INSTRUMENT PANEL	50-01
ALTERNATOR	50-01	ISO HYDRAULIC CONTROL CHANGE.....	20-01
ALTERNATOR BELT	10-01		
ARM	40-01	LIFTING THE EXCAVATOR	10-01
ARM CYLINDER	20-01	LIGHT	50-01
AUXILIARY HYDRAULIC CONTROL VALVE	20-01	LUBRICATING THE EXCAVATOR	10-01
BATTERY	50-01	MAIN RELIEF VALVES.....	20-01
BLADE	30-01		
BLADE CONTROL.....	40-01	PORT RELIEF VALVES.....	20-01
BLADE CYLINDER	20-01		
BLADE EXTENSION	10-01	RADIATOR	60-01
BOOM	40-01	REAR BUMPER	40-01
BOOM CYLINDER	20-01	RECONDITIONING THE ENGINE	60-01
BOOM SWING CYLINDER.....	20-01		
BOOM OFFSET FRAME	40-01	SEAT AND SEAT MOUNT	40-01
BUCKET	40-01	SERVICE SCHEDULE	10-01
BUCKET CYLINDER	20-01	SPARK ARRESTOR MUFFLER	10-01, 60-02
BUCKET LINK	40-01	STANDARD HYDRAULIC CONTROL CHANGE ...	20-01
		STARTER	50-01
CANOPY	40-01	SWING BEARING	30-01
CONSOLE COVER	40-01	SWING MOTOR	20-01
CONTROL LEVERS AND LINKAGE	40-01	SWIVEL JOINT	20-01
CONTROL LOCKOUT	40-01		
CONVERSIONS	SPEC-01	TORQUE SPECIFICATIONS FOR BOLTS	SPEC-01
COOLING SYSTEM	10-01	TRACKS	30-01
		TRACK DAMAGE IDENTIFICATION.....	30-01
ELECTRICAL SYSTEM INFORMATION	50-01	TRACK FRAME	30-01
ENGINE	60-01	TRACK FRAME EXPANSION CYLINDER.....	20-01
ENGINE COMPONENTS AND TESTING	60-01	TRACK FRAME EXPANSION VALVE	20-01
ENGINE COVER	10-01, 40-01	TRACK IDLER.....	30-01
ENGINE FLYWHEEL	60-01	TRACK ROLLER	30-01
ENGINE LUBRICATION SYSTEM.....	10-01	TRANSPORTING THE EXCAVATOR.....	10-01
ENGINE SPECIFICATIONS.....	SPEC-01	TRAVEL CONTROLS	40-01
ENGINE SPEED CONTROL	40-01	TRAVEL MOTOR.....	10-01, 20-01
EXCAVATOR SPECIFICATIONS	SPEC-01	TROUBLESHOOTING	60-02
FOOT CONTROL PEDALS AND LINKAGE	40-01	UPPERSTRUCTURE	40-01
FUEL, COOLANT AND LUBRICANTS	SPEC-01	UPPERSTRUCTURE COVER	40-01
FUEL SYSTEM	10-01	UPPERSTRUCTURE SLEW LOCK	10-01, 40-01
FUEL TANK.....	40-01		
		VOLTAGE REGULATOR	50-01
HORN	40-01		
HYDRAULIC CONNECTION SPECIFICATIONS ..	SPEC-01		
HYDRAULIC CONTROL VALVE.....	20-01		
HYDRAULIC FILTER MOUNT	20-01		
HYDRAULIC FLUID SPECIFICATIONS	SPEC-01		
HYDRAULIC PUMP	20-01		
HYDRAULIC RESERVOIR	20-01		
HYDRAULIC SYSTEM	10-01		
HYDRAULIC SYSTEM INFORMATION	20-01		

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$