 




Bobcat®

Service Manual

**S/N 515011001 & Above
S/N 515111001 & Above**

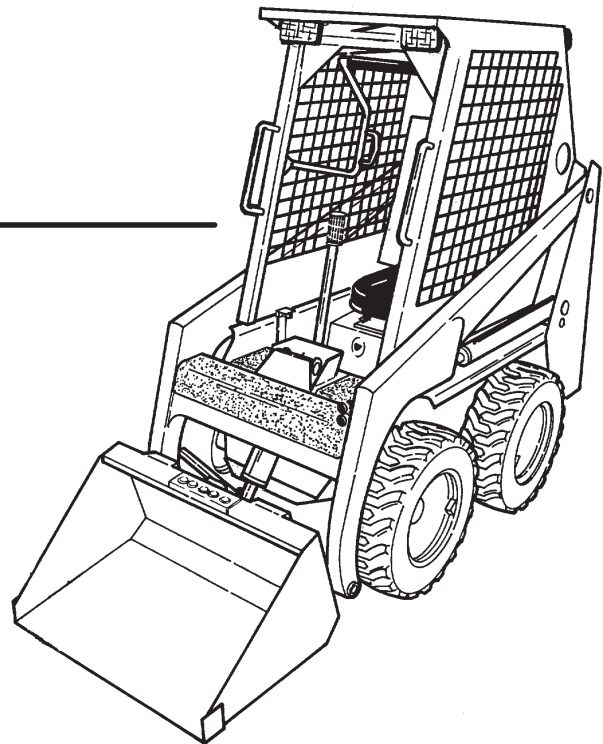

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

**EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)**



Printed in U.S.A.

MAINTENANCE SAFETY



WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


CORRECT

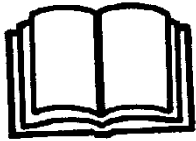

B-10731a

Never service the Bobcat Skid-Steer Loader without instructions.

 
CORRECT

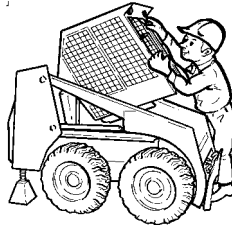

B-12365

Use the correct procedure to lift or lower operator cab.

 
CORRECT

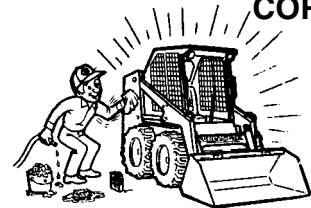

B-7469

Cleaning and maintenance are required daily.

 
WRONG

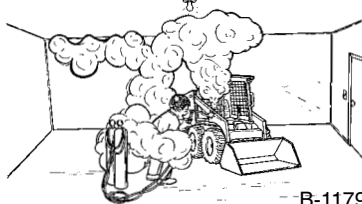

B-11799

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

 
WRONG

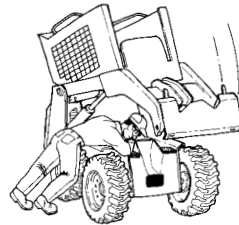

B-15231

Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

 
WRONG

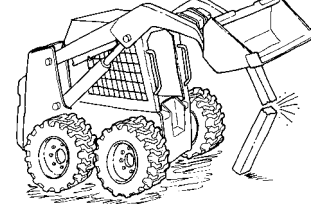

B-15280

- Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

 
WRONG

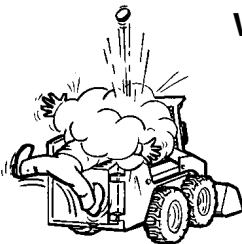

B-6590

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

 WRONG

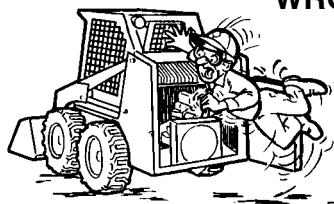

B-6580

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.

WRONG



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER SERVICE	1-1	MAIN RELIEF VALVE	2-1
ALTERNATOR	6-1		
ALTERNATOR BELT	1-1	OIL PUMP	7-1
AUXILIARY CONTROL LOCKBOLT	1-1	OPERATOR CAB	1-1, 5-1
AXLE, BEARINGS AND SPROCKET	4-1	OPERATOR CAB GAS CYLINDER	5-1
AXLE HUB	4-1	OPERATOR SEAT	5-1
AXLE SEAL	4-1		
		PARKING BRAKE DISC	4-1
BATTERY	6-1	PARKING BRAKE PEDAL	4-1
BICS™ (With Press To Operate Button)	8-1	PEDAL INTERLOCK LINKAGE	2-1
BICS™ (Without Press To Operate Button)	8-1	PISTONS AND CONNECTING ROD	7-1
BICS™ BLOCK VALVE	2-1	PIVOT PINS	1-1
BICS™ SYSTEM CONTROLLER	8-1		
BOB-TACH	1-1, 5-1	RADIATOR	7-1
		RADIATOR MOUNTING BRACKET	7-1
CHAINCASE COVERS	4-1	REAR DOOR	5-1
CHAINCASE FLUID	4-1	REAR LIGHTS (OPTIONAL)	6-1
CONTROL PEDALS	2-1	REAR WINDOW	5-1
CONTROL SHIELD AND		REMOTE START SWITCH	1-1
STEERING LEVER PANELS	3-1	ROCKER ARM AND SHAFT	7-1
CRANKSHAFT AND BEARINGS	7-1		
CRANKSHAFT GEAR	7-1	SEAT BAR	5-1
CYLINDER BORE	7-1	SEAT BAR RESTRAINT SYSTEM	1-1
CYLINDER HEAD	7-1	SEAT BAR SENSOR	8-1
		SEAT SENSOR	8-1
DECIMAL & MILLIMETER EQUIVALENTS	9-1	SERVICE SCHEDULE	1-1
DRIVE BELT	3-1	SPARK ARRESTOR MUFFLER	1-1
DRIVE CHAIN	4-1	STANDARD TORQUE SPECIFICATIONS	
		FOR BOLTS	9-1
ELECTRICAL SYSTEM INFORMATION	6-1	STARTER	6-1
ENGINE	7-1	STEERING LEVERS	3-1
ENGINE COMPRESSTION TEST	7-1	STEERING LINKAGE	3-1
ENGINE COOLING SYSTEM	1-1		
ENGINE LUBRICATION SYSTEM	1-1	TENSION PULLEY AND SPRING	3-1
ENGINE MOUNTING BRACKET	7-1	THERMOSTAT	7-1
ENGINE OIL COOLER AND SHROUDING	7-1	TILT CYLINDER	2-1
ENGINE SPECIFICATIONS	9-1	TIMING GEARCASE COVER	7-1
ENGINE SPEED CONTROL	7-1	TIMING GEARS	7-1
		TIRE MAINTENANCE	1-1
FAN	7-1	TOWING THE LOADER	1-1
FINAL DRIVE TRANSMISSION (CHAINCASE)	1-1	TORQUE SPECIFICATION FOR BOLTS	9-1
FLYWHEEL	7-1	TRACTION LOCK	8-1
FRONT LIGHTS (OPTIONAL)	6-1	TRANSPORTING THE LOADER	1-1
FUEL CAMSHAFT	7-1	TROUBLESHOOTING	2-1, 3-1, 6-1, 7-1
FUEL INJECTION PUMP	7-1		
FUEL INJECTOR NOZZLES	7-1	U.S. TO METRIC CONVERSION	9-1
FUEL SYSTEM	1-1, 7-1		
FUEL TANK	5-1	VALVE & VALVE SPRINGS	7-1
		VALVE CLEARANCE	7-1
GLOW PLUGS	7-1	VALE GUIDE, VALVE & VALVE SEAT	7-1
HYDRAULIC CONNECTION SPECIFICATION	9-1	WATER PUMP	7-1
HYDRAULIC CONTROL VALVE	2-1		
HYDRAULIC CYLINDERS	2-1		
HYDRAULIC FILTER BLOCK	2-1		
HYDRAULIC/HYDROSTATIC			
FLUID SPECIFICATIONS	9-1		
HYDRAULIC/HYDROSTATIC SYSTEM	1-1		
HYDRAULIC PUMP	2-1		
HYDRAULIC RESERVOIR	2-1		
HYDRAULIC SYSTEM INFORMATION	2-1		
HYDROSTATIC MOTOR	3-1		
HYDROSTATIC PUMP	3-1		
HYDROSTATIC SYSTEM INFORMATION	3-1		
IDLER GEAR AND CAMSHAFT	7-1		
INSTRUMENT PANEL	6-1		
LIFT ARM SUPPORT DEVICE	1-1		
LIFT ARMS	5-1		
LIFT CYLINDER(S)	2-1		
LIFTING AND BLOCKING THE LOADER	1-1		
LIFTING THE LOADER	1-1		
LOADER SPECIFICATIONS	9-1		
LUBRICATING THE LOADER	1-1		

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$