

Shop Manual

WHEEL LOADER

WA150-6

SERIAL NUMBERS 80001 and up

ecot3

KOMATSU

WHEEL LOADER

WA150-6

Machine model	Serial number
WA150-6	80001 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title.....	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04884-01
00 Index and foreword	SEN04888-01
100 Index	SEN04896-01 ●
200 Foreword and general information	SEN04897-00
01 Specification	SEN04889-00
100 Specification and technical data.....	SEN04898-00
10 Structure, function and maintenance standard.....	SEN04890-00
100 Engine and cooling system	SEN04899-00
200 Power train	SEN04900-00
300 Steering system	SEN04901-00
400 Brake system	SEN04902-00
500 Undercarriage and frame	SEN04903-00
600 Hydraulic system.....	SEN04904-00
700 Work equipment.....	SEN04905-00
800 Cab and its attachments	SEN04906-00
901 Electrical system, Part 1	SEN04907-00
902 Electrical system, Part 2	SEN04908-00
20 Standard value table.....	SEN04891-00
100 Standard service value table.....	SEN04936-00
30 Testing and adjusting	SEN04892-00
101 Testing and adjusting, Part 1.....	SEN04937-00
102 Testing and adjusting, Part 2.....	SEN04938-00
103 Testing and adjusting, Part 3.....	SEN04939-00
40 Troubleshooting.....	SEN04893-00
100 Failure code table and fuse locations	SEN04940-00
200 General information on troubleshooting.....	SEN04941-00
301 Troubleshooting by failure code (Display of code), Part 1	SEN04942-00
302 Troubleshooting by failure code (Display of code), Part 2	SEN04943-00
303 Troubleshooting by failure code (Display of code), Part 3	SEN04944-00
304 Troubleshooting by failure code (Display of code), Part 4	SEN04945-00
305 Troubleshooting by failure code (Display of code), Part 5	SEN04946-00

306	Troubleshooting by failure code (Display of code), Part 6.....	SEN04947-00
307	Troubleshooting by failure code (Display of code), Part 7.....	SEN04948-00
400	Troubleshooting of electrical system (E-mode)	SEN04949-00
500	Troubleshooting of hydraulic and mechanical system (H-mode).....	SEN04950-00
600	Troubleshooting of engine (S-mode).....	SEN04951-00
50	Disassembly and assembly	SEN04894-00
100	General information on disassembly and assembly.....	SEN05158-00 ○
200	Engine and cooling system	SEN05159-00 ○
300	Power train	SEN05160-00 ○
400	Undercarriage and frame	SEN05161-00 ○
500	Hydraulic system	SEN05162-00 ○
600	Work equipment	SEN05163-00 ○
700	Cab and its attachments	SEN05164-00 ○
800	Electrical system	SEN05165-00 ○
80	Appendix.....	SEN05042-00
100	Air conditioner	SEN05043-00
90	Diagrams and drawings	SEN04895-00
100	Hydraulic diagrams and drawings	SEN04909-00
200	Electrical diagrams and drawings	SEN04910-00

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$