

Shop Manual

WHEEL LOADER

WA250 -6

WA250PZ-6

SERIAL NUMBERS

WA250- 75001
WA250PZ- 75001 and up

ecot3

KOMATSU

WHEEL LOADER

WA250-6

WA250PZ-6

Machine model	Serial number
WA250-6	75001 and up
WA250PZ-6	75001 and up

00 Index and foreword	
100 Index	

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN03813-03
00 Index and foreword	SEN03814-03
100 Index	SEN03822-03 ●
200 Foreword and general information	SEN03823-01
01 Specification	SEN03815-00
100 Specification and technical data	SEN03824-00
10 Structure, function and maintenance standard	SEN03816-01
100 Engine and cooling system	SEN03825-00
200 Power train	SEN03826-00
300 Steering system	SEN03827-01
400 Brake system	SEN03828-00
500 Undercarriage and frame	SEN03829-00
600 Hydraulic system	SEN03830-00
700 Work equipment	SEN03831-00
800 Cab and its attachments	SEN03832-00
910 Electrical system, Part 1	SEN03833-01
920 Electrical system, Part 2	SEN03834-01
20 Standard value table	SEN03817-00
100 Standard service value table	SEN03835-00
30 Testing and adjusting	SEN03818-02
110 Testing and adjusting, Part 1	SEN03836-01
120 Testing and adjusting, Part 2	SEN03837-01 ●
130 Testing and adjusting, Part 3	SEN03838-00

40 Troubleshooting	SEN03819-01
100 Failure code table and fuse locations	SEN03839-00
200 General information on troubleshooting	SEN03840-01
310 Troubleshooting by failure code (Display of code), Part 1	SEN03841-00
320 Troubleshooting by failure code (Display of code), Part 2	SEN03842-00
330 Troubleshooting by failure code (Display of code), Part 3	SEN03843-00
340 Troubleshooting by failure code (Display of code), Part 4	SEN03844-00
350 Troubleshooting by failure code (Display of code), Part 5	SEN03845-00
360 Troubleshooting by failure code (Display of code), Part 6	SEN03846-00
370 Troubleshooting by failure code (Display of code), Part 7	SEN03847-00
400 Troubleshooting of electrical system (E-mode)	SEN03848-00
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN03849-00
600 Troubleshooting of engine (S-mode)	SEN03850-00
 50 Disassembly and assembly	SEN03820-02
100 General information on disassembly and assembly	SEN03851-01
200 Engine and cooling system	SEN03852-00
310 Power train, Part 1	SEN03853-00
320 Power train, Part 2	SEN03854-00
400 Undercarriage and frame	SEN03855-00
500 Hydraulic system	SEN03856-00
600 Work equipment	SEN03857-01
700 Cab and its attachments	SEN03858-00
800 Electrical system	SEN03859-00
 90 Diagrams and drawings	SEN03821-01
100 Hydraulic diagrams and drawings	SEN03860-01
200 Electrical diagrams and drawings	SEN03861-01

Table of contents

00 Index and foreword

100 Index	SEN03822-03
Composition of shop manual	2
Table of contents	4
200 Foreword and general information	SEN03823-01
Safety notice	2
How to read the shop manual	7
Explanation of terms for maintenance standard	9
Handling of electric equipment and hydraulic component	11
Handling of connectors newly used for engines	20
How to read electric wire code	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table	32
Conversion table	36

01 Specification

100 Specification and technical data	SEN03824-00
Specification dimension drawing	3
Specifications	4
Weight table	8
Table of fuel, coolant and lubricants	10

10 Structure, function and maintenance standard

100 Engine and cooling system	SEN03825-00
Engine mount and transfer mount	2
Damper	3
Cooling system	4
Cooling system hydraulic piping diagram	5
Cooling fan motor	7
200 Power train	SEN03826-00
Power train	3
Power train system diagram	4
Drive shaft	6
HST hydraulic piping diagram	7
HST pump	8
HST motor	16
Transfer	22
Clutch solenoid valve	33
Axle	34
Differential	36
Torque proportioning differential	41
Limited slip differential	44
Final drive	48
300 Steering system	SEN03827-01
Steering piping diagram	3
Steering column	4
Priority valve	5
Orbit-roll valve	8
2-way restrictor valve	16
Cushion valve	17
Steering cylinder	18
Emergency steering piping diagram	20
Emergency steering valve	21
Steering relief valve	24

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$