

Shop Manual

WHEEL LOADER

WA250 -6

WA250PZ-6

SERIAL NUMBERS WA250- 75001 and up
WA250PZ- 75001

ecot3

KOMATSU

WHEEL LOADER

WA250-6
WA250PZ-6

Machine model	Serial number
WA250-6	75001 and up
WA250PZ-6	75001 and up

00 Index and foreword
100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN03979-02
00 Index and foreword	SEN03980-02
100 Index	SEN03988-02 ●
200 Foreword and general information	SEN03989-01
01 Specification	SEN03981-01
100 Specification and technical data.....	SEN03990-01
10 Structure, function and maintenance standard.....	SEN03982-02
100 Engine and cooling system	SEN03991-01
200 Power train.....	SEN03992-01
300 Steering system	SEN03993-00
400 Brake system	SEN03994-00
500 Undercarriage and frame	SEN03995-00
600 Hydraulic system.....	SEN03996-00
700 Work equipment.....	SEN03997-01
800 Cab and its attachments	SEN03998-00
910 Electrical system, Part 1	SEN03999-00
920 Electrical system, Part 2	SEN04000-02 ●
20 Standard value table.....	SEN03983-01
100 Standard service value table	SEN04001-01
30 Testing and adjusting	SEN03984-01
110 Testing and adjusting, Part 1.....	SEN04002-01
120 Testing and adjusting, Part 2.....	SEN04003-01
130 Testing and adjusting, Part 3.....	SEN04004-01

40 Troubleshooting	SEN03985-02
100 Failure code table and fuse locations	SEN04005-02 ●
200 General information on troubleshooting	SEN04006-01
310 Troubleshooting by failure code (Display of code), Part 1	SEN04007-01
320 Troubleshooting by failure code (Display of code), Part 2	SEN04008-01
330 Troubleshooting by failure code (Display of code), Part 3	SEN04009-02 ●
340 Troubleshooting by failure code (Display of code), Part 4	SEN04010-01
350 Troubleshooting by failure code (Display of code), Part 5	SEN04011-01
360 Troubleshooting by failure code (Display of code), Part 6	SEN04012-01
370 Troubleshooting by failure code (Display of code), Part 7	SEN04013-00
400 Troubleshooting of electrical system (E-mode)	SEN04014-01
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN04015-01
600 Troubleshooting of engine (S-mode)	SEN04016-01
 50 Disassembly and assembly	 SEN03986-02
100 General information on disassembly and assembly	SEN04017-01
200 Engine and cooling system	SEN04018-02 ●
310 Power train, Part 1	SEN04019-00
320 Power train, Part 2	SEN04020-00
400 Undercarriage and frame	SEN04021-00
500 Hydraulic system	SEN04022-01
600 Work equipment	SEN04023-00
700 Cab and its attachments	SEN04024-00
800 Electrical system	SEN04025-00
 90 Diagrams and drawings	 SEN03987-01
100 Hydraulic diagrams and drawings	SEN04026-01
200 Electrical diagrams and drawings	SEN04027-01

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$