

Shop Manual

WHEEL LOADER

WA320 -6

WA320PZ-6

SERIAL NUMBERS

WA320- 70001
WA320PZ- 70001 and up

ecot3

KOMATSU

WHEEL LOADER

WA320-6 WA320PZ-6 (KA SPEC.)

Machine model	Serial number
WA320-6	70001 and up
WA320PZ-6 (KA SPEC.)	70001 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN03911-03
00 Index and foreword	SEN03912-03
100 Index	SEN03920-03 ●
200 Foreword and general information	SEN03921-01
01 Specification	SEN03913-01
100 Specification and technical data	SEN03922-01
10 Structure, function and maintenance standard	SEN03914-02
100 Engine and cooling system	SEN03923-01
200 Power train	SEN03924-01
300 Steering system	SEN03925-01
400 Brake system	SEN03926-00
500 Undercarriage and frame	SEN03927-00
600 Hydraulic system	SEN03928-00
700 Work equipment	SEN03929-01
800 Cab and its attachments	SEN03930-00
910 Electrical system, Part 1	SEN03931-01
920 Electrical system, Part 2	SEN03932-02
20 Standard value table	SEN03915-00
100 Standard service value table	SEN03933-00
30 Testing and adjusting	SEN03916-03
110 Testing and adjusting, Part 1	SEN03934-02
120 Testing and adjusting, Part 2	SEN03935-03 ●
130 Testing and adjusting, Part 3	SEN03936-01
40 Troubleshooting	SEN03917-02
100 Failure code table and fuse locations	SEN03937-01
200 General information on troubleshooting	SEN03938-02
310 Troubleshooting by failure code (Display of code), Part 1	SEN03939-00
320 Troubleshooting by failure code (Display of code), Part 2	SEN03940-00
330 Troubleshooting by failure code (Display of code), Part 3	SEN03941-01
340 Troubleshooting by failure code (Display of code), Part 4	SEN03942-01

350 Troubleshooting by failure code (Display of code), Part 5.....	SEN03943-01
360 Troubleshooting by failure code (Display of code), Part 6.....	SEN03944-01
370 Troubleshooting by failure code (Display of code), Part 7.....	SEN03945-00
400 Troubleshooting of electrical system (E-mode)	SEN03946-01
500 Troubleshooting of hydraulic and mechanical system (H-mode).....	SEN03947-01
600 Troubleshooting of engine (S-mode)	SEN03948-01
50 Disassembly and assembly	SEN03918-02
100 General information on disassembly and assembly.....	SEN03949-01
200 Engine and cooling system	SEN03950-02
310 Power train, Part 1.....	SEN03951-00
320 Power train, Part 2.....	SEN03952-00
400 Undercarriage and frame	SEN03953-00
500 Hydraulic system	SEN03954-00
600 Work equipment	SEN03955-00
700 Cab and its attachments.....	SEN03956-00
800 Electrical system	SEN03957-00
90 Diagrams and drawings	SEN03919-01
100 Hydraulic diagrams and drawings	SEN03958-01
200 Electrical diagrams and drawings.....	SEN03959-01

Table of contents

00 Index and foreword

100 Index	SEN03920-03
Composition of shop manual	2
Table of contents	4
200 Foreword and general information	SEN03921-01
Safety notice	2
How to read the shop manual	7
Explanation of terms for maintenance standard	9
Handling of electric equipment and hydraulic component	11
Handling of connectors newly used for engines	20
How to read electric wire code	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table	32
Conversion table	36

01 Specification

100 Specification and technical data	SEN03922-01
Specification dimension drawing	3
Specifications	4
Weight table	8
Table of fuel, coolant and lubricants	10

10 Structure, function and maintenance standard

100 Engine and cooling system	SEN03923-01
Engine mount and transfer mount	2
Damper	3
Cooling system	4
Cooling system hydraulic piping diagram	5
Cooling fan motor	7
200 Power train	SEN03924-01
Power train	3
Power train system diagram	4
Drive shaft	6
HST hydraulic piping diagram	7
HST pump	8
HST motor	16
Transfer	22
Clutch solenoid valve	33
Axle	34
Differential	36
Torque proportioning differential	41
Limited slip differential	44
Final drive	48
300 Steering system	SEN03925-01
Steering piping diagram	3
Steering column	4
Priority valve	5
Orbit-roll valve	8
Cushion valve	16
Steering cylinder	17
Emergency steering piping diagram	19
Emergency steering valve	20
Steering relief valve	23

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$