

Shop Manual

WA320-8

WHEEL LOADER

SERIAL NUMBERS WA320-8 A38001-A39471

ENGINE 6D107E-3

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-21
FOREWORD, SAFETY, BASIC INFORMATION	00-27
HOW TO READ THE SHOP MANUAL	00-27
SAFETY NOTICE FOR OPERATION	00-29
PRECAUTIONS TO PREVENT FIRE	00-37
ACTIONS IF FIRE OCCURS	00-39
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-40
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-41
PRECAUTIONS FOR DEF	00-42
STORE AdBlue/DEF	00-43
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-44
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-47
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-54
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-56
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-57
PRACTICAL USE OF KOMTRAX	00-58
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-59
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-63
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-67
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-68
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-71
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-73
HOW TO READ ELECTRICAL WIRE CODE	00-74
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-78
STANDARD TIGHTENING TORQUE TABLE	00-81
CONVERSION TABLE	00-88
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
SPECIFICATIONS	01-11
WEIGHT TABLE	01-16
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-18
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-6
UREA SCR SYSTEM	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM	10-12
UREA SCR SYSTEM DIAGRAM	10-14
FUNCTION OF UREA SCR SYSTEM	10-15
COMPONENT PARTS OF UREA SCR SYSTEM	10-24
BOOT-UP SYSTEM	10-33
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-33
SYSTEM OPERATING LAMP SYSTEM	10-35
BATTERY DISCONNECT SWITCH	10-36
PREHEATING SYSTEM	10-37
ENGINE SYSTEM	10-39
LAYOUT DRAWING OF ENGINE SYSTEM	10-39
ENGINE CONTROL SYSTEM	10-41
AUTOMATIC IDLE STOP SYSTEM	10-48
COMPONENT PARTS OF ENGINE SYSTEM	10-49
COOLING SYSTEM	10-67

LAYOUT DRAWING OF COOLING SYSTEM	10-67
COOLING FAN CONTROL SYSTEM	10-69
COMPONENT PARTS OF COOLING SYSTEM	10-74
CONTROL SYSTEM	10-87
LAYOUT DRAWING OF CONTROL SYSTEM	10-87
MACHINE MONITOR SYSTEM	10-89
REARVIEW MONITOR SYSTEM	10-91
KOMTRAX SYSTEM	10-92
COMPONENT PARTS OF CONTROL SYSTEM	10-93
HYDRAULIC SYSTEM	10-131
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-131
CLSS	10-132
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-135
POWER TRAIN SYSTEM	10-182
LAYOUT DRAWING OF POWER TRAIN SYSTEM	10-182
OPERATION OF POWER TRAIN SYSTEM	10-184
DIRECTIONAL SELECTOR SWITCH CONTROL FUNCTION	10-185
HST CONTROL SYSTEM	10-187
HST CHARGE SYSTEM	10-189
HST PUMP CONTROL SYSTEM	10-190
HST CONTROLLER GEAR SHIFT CONTROL FUNCTION	10-192
TRANSFER CLUTCH CONTROL FUNCTION	10-195
HST SYSTEM PROTECTION FUNCTION	10-196
MAXIMUM SPEED LOW FUEL CONSUMPTION CONTROL	10-199
KOMATSU TRACTION CONTROL SYSTEM (KTCS)	10-202
COMPONENT PARTS OF POWER TRAIN SYSTEM	10-207
WORK EQUIPMENT SYSTEM	10-253
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-253
WORK EQUIPMENT CONTROL SYSTEM	10-255
WORK EQUIPMENT LOCK SYSTEM	10-256
BUCKET POSITIONER SYSTEM	10-258
FORK POSITIONER SYSTEM	10-262
REMOTE POSITIONER SYSTEM	10-266
ECSS	10-269
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM	10-271
STEERING SYSTEM	10-286
LAYOUT DRAWING OF STEERING SYSTEM	10-286
STEERING COLUMN	10-287
COMPONENT PARTS OF STEERING SYSTEM	10-288
BRAKE SYSTEM	10-300
LAYOUT DRAWING OF BRAKE SYSTEM	10-300
PARKING BRAKE CONTROL SYSTEM	10-302
COMPONENT PARTS OF BRAKE SYSTEM	10-306
AUTO-GREASING SYSTEM	10-323
LAYOUT DRAWING OF AUTO-GREASING SYSTEM	10-323
SPECIFICATIONS OF AUTO-GREASING SYSTEM	10-324
FUNCTION OF AUTO-GREASING SYSTEM	10-326
COMPONENT PARTS OF AUTO-GREASING SYSTEM	10-327
UNDERCARRIAGE AND FRAME	10-328
FRAME, AXLE MOUNT AND CENTER HINGE PIN	10-328
TIRE	10-333
WORK EQUIPMENT	10-335
STRUCTURE OF WORK EQUIPMENT	10-335
STRUCTURE OF BUCKET	10-336
CAB AND ITS ATTACHMENTS	10-337
ROPS CAB	10-337
CAB MOUNT	10-338
20 STANDARD VALUE TABLE	20-1

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$