

Shop Manual

WA320-8

WHEEL LOADER

SERIAL NUMBERS **WA320-8 A38001 and up**

ENGINE **6D107E-3**

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-21
FOREWORD, SAFETY, BASIC INFORMATION	00-27
HOW TO READ THE SHOP MANUAL	00-27
SAFETY NOTICE FOR OPERATION	00-29
PRECAUTIONS TO PREVENT FIRE	00-37
ACTIONS IF FIRE OCCURS	00-39
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-40
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-41
PRECAUTIONS FOR DEF	00-42
STORE AdBlue/DEF	00-43
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-44
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-47
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-54
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-56
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-57
PRACTICAL USE OF KOMTRAX	00-58
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-59
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-63
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-67
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-68
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-71
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-73
HOW TO READ ELECTRICAL WIRE CODE	00-74
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-78
STANDARD TIGHTENING TORQUE TABLE	00-81
CONVERSION TABLE	00-88
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
SPECIFICATIONS	01-11
WEIGHT TABLE	01-16
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-18
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-6
UREA SCR SYSTEM	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM	10-12
UREA SCR SYSTEM DIAGRAM	10-14
FUNCTION OF UREA SCR SYSTEM	10-15
COMPONENT PARTS OF UREA SCR SYSTEM	10-31
BOOT-UP SYSTEM	10-40
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-40
SYSTEM OPERATING LAMP SYSTEM	10-42
BATTERY DISCONNECT SWITCH	10-43
PREHEATING SYSTEM	10-44
ENGINE SYSTEM	10-46
LAYOUT DRAWING OF ENGINE SYSTEM	10-46
ENGINE CONTROL SYSTEM	10-48
AUTOMATIC IDLE STOP SYSTEM	10-55
COMPONENT PARTS OF ENGINE SYSTEM	10-56
COOLING SYSTEM	10-74

LAYOUT DRAWING OF COOLING SYSTEM	10-74
COOLING FAN CONTROL SYSTEM.....	10-76
COMPONENT PARTS OF COOLING SYSTEM.....	10-81
CONTROL SYSTEM.....	10-94
LAYOUT DRAWING OF CONTROL SYSTEM	10-94
MACHINE MONITOR SYSTEM	10-96
REARVIEW MONITOR SYSTEM.....	10-98
KOMTRAX SYSTEM.....	10-99
COMPONENT PARTS OF CONTROL SYSTEM.....	10-100
HYDRAULIC SYSTEM.....	10-138
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-138
CLSS	10-139
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-142
POWER TRAIN SYSTEM	10-189
LAYOUT DRAWING OF POWER TRAIN SYSTEM.....	10-189
OPERATION OF POWER TRAIN SYSTEM.....	10-191
DIRECTIONAL SELECTOR SWITCH CONTROL FUNCTION.....	10-192
HST CONTROL SYSTEM.....	10-194
HST CHARGE SYSTEM.....	10-196
HST PUMP CONTROL SYSTEM.....	10-197
HST CONTROLLER GEAR SHIFT CONTROL FUNCTION.....	10-199
TRANSFER CLUTCH CONTROL FUNCTION.....	10-202
HST SYSTEM PROTECTION FUNCTION.....	10-203
MAXIMUM SPEED LOW FUEL CONSUMPTION CONTROL	10-206
KOMATSU TRACTION CONTROL SYSTEM (KTCS).....	10-209
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-214
WORK EQUIPMENT SYSTEM.....	10-260
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-260
WORK EQUIPMENT CONTROL SYSTEM.....	10-262
WORK EQUIPMENT LOCK SYSTEM.....	10-263
BUCKET POSITIONER SYSTEM	10-265
FORK POSITIONER SYSTEM	10-269
REMOTE POSITIONER SYSTEM	10-273
ECSS.....	10-276
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-278
STEERING SYSTEM.....	10-293
LAYOUT DRAWING OF STEERING SYSTEM	10-293
STEERING COLUMN	10-294
COMPONENT PARTS OF STEERING SYSTEM.....	10-295
BRAKE SYSTEM.....	10-307
LAYOUT DRAWING OF BRAKE SYSTEM	10-307
PARKING BRAKE CONTROL SYSTEM	10-309
COMPONENT PARTS OF BRAKE SYSTEM.....	10-313
AUTO-GREASING SYSTEM	10-329
LAYOUT DRAWING OF AUTO-GREASING SYSTEM.....	10-329
SPECIFICATIONS OF AUTO-GREASING SYSTEM	10-330
FUNCTION OF AUTO-GREASING SYSTEM	10-332
COMPONENT PARTS OF AUTO-GREASING SYSTEM	10-333
UNDERCARRIAGE AND FRAME.....	10-334
FRAME, AXLE MOUNT AND CENTER HINGE PIN	10-334
TIRE	10-337
WORK EQUIPMENT.....	10-339
STRUCTURE OF WORK EQUIPMENT	10-339
STRUCTURE OF BUCKET.....	10-340
CAB AND ITS ATTACHMENTS	10-341
ROPS CAB	10-341
CAB MOUNT	10-342
20 STANDARD VALUE TABLE	20-1

CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: WA320-8	20-9
STANDARD VALUE TABLE FOR MACHINE	20-13
STANDARD VALUE TABLE FOR MACHINE: WA320-8	20-13
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-27
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
ABBREVIATION LIST	30-6
RELATED INFORMATION ON TESTING AND ADJUSTING	30-12
TOOLS FOR TESTING AND ADJUSTING	30-12
SKETCH OF TOOLS FOR TESTING AND ADJUSTING	30-21
ENGINE AND COOLING SYSTEM	30-22
TEST ENGINE SPEED	30-22
TEST BOOST PRESSURE	30-25
TESTING EXHAUST GAS TEMPERATURE	30-28
TEST EXHAUST GAS COLOR	30-30
TEST AND ADJUST VALVE CLEARANCE	30-34
TEST COMPRESSION PRESSURE	30-36
TEST BLOWBY PRESSURE	30-41
TEST ENGINE OIL PRESSURE	30-44
TEST EGR VALVE AND VGT OIL PRESSURE	30-46
TEST FUEL PRESSURE	30-48
TEST FUEL DISCHARGE, RETURN AND LEAKAGE	30-54
BLEED AIR FROM FUEL SYSTEM	30-61
TEST FUEL CIRCUIT FOR LEAKAGE	30-63
HANDLE CYLINDER CUT-OUT MODE OPERATION	30-65
HANDLE NO-INJECTION CRANKING OPERATION	30-66
TEST KDPF, SCR AND MUFFLER STACK FOR LOOSENESS AND DAMAGE	30-67
TEST INSTALLED CONDITION OF CYLINDER HEADS AND MANIFOLDS	30-68
TEST ENGINE PIPING FOR DAMAGE AND LOOSENESS	30-69
TEST AND ADJUST AIR CONDITIONER COMPRESSOR BELT TENSION	30-70
TEST ALTERNATOR BELT	30-72
TEST AUTOMATIC TENSIONER	30-74
WRITE ASH IN SOOT ACCUMULATION CORRECTION TO ENGINE CONTROLLER	30-77
TEST SCR RELATED FUNCTIONS	30-78
CLEAN AdBlue/DEF TANK	30-108
POWER TRAIN	30-112
TEST AND ADJUST HST OIL PRESSURE	30-112
TEST THE CONTROL PRESSURE OF TRANSFER CLUTCH	30-116
TEST DRIVE SHAFT FOR LOOSENESS, BACKLASH, AND DAMAGE	30-118
STEERING SYSTEM	30-119
TEST STEERING WHEEL	30-119
TEST AND ADJUST STEERING CIRCUIT OIL PRESSURE	30-121
BLEED AIR FROM STEERING CYLINDER CIRCUIT	30-124
BRAKE SYSTEM	30-125
RELEASE REMAINING PRESSURE IN BRAKE ACCUMULATOR CIRCUIT	30-125
TEST WHEEL BRAKE OIL PRESSURE	30-126
TEST AND ADJUST BRAKE ACCUMULATOR CHARGE PRESSURE	30-128
BLEED AIR FROM BRAKE CIRCUIT	30-130
TEST BRAKING PERFORMANCE	30-131
TEST BRAKE PEDAL	30-132
TEST LOWERING OF WHEEL BRAKE PRESSURE	30-133
TEST WEAR OF WHEEL BRAKE DISC	30-136
TEST PARKING BRAKE OIL PRESSURE	30-138
TEST PARKING BRAKE PERFORMANCE	30-140
RELEASE PARKING BRAKE MANUALLY	30-141

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$