

Shop Manual

WHEEL LOADER

WA380-7

SERIAL NUMBERS 10001 and up

KOMATSU

WHEEL LOADER

WA380-7

Model	Serial Number
-------	---------------

WA380-7	10001 and up
---------	--------------

00 Index and foreword

Index

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-17
Important safety notice	00-17
How to read the shop manual	00-24
Explanation of terms for maintenance standard	00-26
Handling of fuel system devices	00-28
Handling of intake system parts	00-29
Handling of hydraulic equipment	00-30
Method of disconnecting and connecting push-pull type coupler	00-32
Handling of electrical equipment	00-35
How to read electric wire code	00-43
Precautions when performing operation	00-46
Standard tightening torque table	00-49
List of abbreviation	00-53
Conversion table	00-57
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Specification	01-5
Weight table	01-11
Table of fuel, coolant and lubricants	01-13
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-4
Engine related parts	10-4
KVG T	10-6
EGR system piping drawing	10-12
EGR system circuit diagram	10-14
EGR valve	10-16
EGR cooler	10-18
KCCV layout drawing	10-19
KCCV ventilator	10-21
KDPF	10-23
Cooling system	10-29
Cooling fan pump	10-32
Cooling fan motor	10-41
Power train	10-49
Power train system	10-49
Drive shaft	10-52
Power train piping drawing	10-53
Transmission control	10-54
Torque converter	10-56
Transmission	10-61
Transmission control valve	10-79
Forward and reverse clutch ECMV and gear speed clutch ECMV	10-82
Lockup clutch ECMV	10-89
Main relief and torque converter relief valve	10-92
Axle	10-94
Differential	10-96
Limited slip differential	10-100
Final drive	10-104
Steering system	10-106
Layout of steering devices	10-106
Steering column	10-107
Steering pump	10-108

Steering valve	10-120
Orbit-roll valve	10-134
Stop valve	10-140
Emergency steering motor	10-141
Emergency steering pump	10-142
Brake system	10-143
Layout of brake parts	10-143
Charge valve	10-145
Brake valve	10-151
Accumulator (for brake)	10-155
Brake	10-156
Parking brake control	10-159
Parking brake	10-160
Parking brake solenoid valve	10-161
Parking brake emergency release valve	10-164
Undercarriage and frame	10-165
Axle mount and center hinge pin	10-165
Tire	10-166
Hydraulic system	10-168
Hydraulic component layout	10-168
Work equipment control	10-170
Hydraulic tank	10-171
Double type gear pump	10-173
Work equipment pump	10-174
Control valve	10-186
CLSS	10-196
Hydraulic circuit diagram and name of valves	10-199
Accumulator charge valve	10-214
Stabilizer valve	10-218
Work equipment lock solenoid valve	10-223
Accumulator (for PPC circuit)	10-224
Accumulator (for E.C.S.S.)	10-225
Work equipment	10-226
Work equipment linkage	10-226
Bucket	10-227
Bucket positioner and boom positioner	10-228
Cab and its attachments	10-229
ROPS cab	10-229
Electrical system	10-230
Engine control system	10-230
Preheating system	10-232
Engine power mode selector circuit	10-234
Engine output limit function	10-235
Automatic warm-up function	10-236
Parking brake control system	10-237
System operating lamp function	10-239
Battery disconnect switch function	10-241
Transmission controller system	10-243
Work equipment control system	10-278
Machine monitor system	10-299
Rear view monitor system	10-323
KOMTRAX system	10-326
System component parts	10-329
Sensors	10-354
20 Standard value tables	20-1
Table of contents	20-2
Standard service value table	20-3
Standard value table for engine	20-3
Standard value table for machine	20-5

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$