

SHOP MANUAL

WA430-6E0

MACHINE MODEL

WA430-6E0

SERIAL NUMBER

H60266 and up

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require.
Materials and specifications are subject to change without notice.
- WA430-6E0 mounts the SAA6D114-3 engine.

WHEEL LOADER

WA430-6E0

Machine model	Serial number
WA430-6E0	H60266 and up

00 Index and foreword

Index

Composition of shop manual.....	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	VEBM948101
00 Index and foreword	SEN01388-00
Index	SEN01396-03 ●
Foreword and general information	SEN01397-01
01 Specification	SEN01389-00
Specification and technical data	SEN01398-00
10 Structure, function and maintenance standard	SEN01390-00
Engine and cooling system	SEN01399-00
Power train	SEN01400-00
Steering system	SEN01401-00
Brake system	SEN01402-00
Undercarriage and frame	SEN01403-00
Hydraulic system, Part 1	SEN01404-00
Hydraulic system, Part 2	SEN01405-00
Work equipment	SEN01406-00
Cab and its attachments	SEN01407-00
Electrical system, Part 1	SEN01408-00
Electrical system, Part 2	SEN01409-00
Electrical system, Part 3	SEN01410-00
20 Standard value table	SEN01391-00
Standard service value table	SEN01603-00
30 Testing and adjusting	SEN01392-00
Testing and adjusting, Part 1	SEN01604-00
Testing and adjusting, Part 2	SEN01605-00
Testing and adjusting, Part 3	SEN01606-00
40 Troubleshooting	SEN01393-00
Failure code table and fuse locations	SEN01751-00
General information on troubleshooting	SEN01752-00
Troubleshooting by failure code (Display of code), Part 1	SEN01753-00
Troubleshooting by failure code (Display of code), Part 2	SEN01754-00
Troubleshooting by failure code (Display of code), Part 3	SEN01755-00

Troubleshooting by failure code (Display of code), Part 4	SEN01756-00
Troubleshooting by failure code (Display of code), Part 5	SEN01757-00
Troubleshooting by failure code (Display of code), Part 6	SEN01758-00
Troubleshooting by failure code (Display of code), Part 7	SEN01759-00
Troubleshooting by failure code (Display of code), Part 8	SEN01760-00
Troubleshooting by failure code (Display of code), Part 9	SEN01761-00
Troubleshooting by failure code (Display of code), Part 10	SEN01762-00
Troubleshooting of electrical system (E-mode)	SEN01763-00
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01764-00
Troubleshooting of engine (S-mode)	SEN01765-00
 50 Disassembly and assembly	 SEN01394-00
General information on disassembly and assembly	SEN02257-00
Engine and cooling system	SEN02258-00
Power train, Part 1	SEN02259-00
Power train, Part 2	SEN02260-00
Steering system	SEN02261-00
Brake system	SEN02262-00
Undercarriage and frame	SEN02263-00
Hydraulic system	SEN02264-00
Work equipment	SEN02265-00
Cab and its attachments	SEN02266-00
Electrical system	SEN02267-00
 90 Diagrams and drawings	 SEN01395-00
Hydraulic diagrams and drawings	SEN01411-00
Electrical diagrams and drawings	SEN01412-01 ●

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$