

Shop Manual

WHEEL LOADER

WA470-6

WA480-6

SERIAL NUMBERS

WA470-85001

WA480-85001

and up

ecot3

KOMATSU

WHEEL LOADER

WA470-6
WA480-6

Machine model	Serial number
WA470-6	85001 and up
WA480-6	85001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents.....	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00783-07
00 Index and foreword	SEN00785-07
Index	SEN00802-07 ●
Foreword and general information	SEN00803-03
01 Specification	SEN00787-02
Specification and technical data	SEN00804-02
10 Structure, function and maintenance standard	SEN00796-03
Engine and cooling system	SEN01301-01
Power train	SEN01302-02
Steering system	SEN01303-02
Brake system	SEN01304-01
Undercarriage and frame	SEN01305-02
Hydraulic system, Part 1	SEN01306-03
Hydraulic system, Part 2	SEN01307-01
Work equipment	SEN01308-01
Cab and its attachments	SEN01309-02
Electrical system, Part 1	SEN01310-02
Electrical system, Part 2	SEN01311-02
Electrical system, Part 3	SEN01312-02
20 Standard value table	SEN00797-02
Standard service value table	SEN01313-02 ●
30 Testing and adjusting	SEN00798-02
Testing and adjusting, Part 1	SEN01589-02 ●
Testing and adjusting, Part 2	SEN01590-02 ●
Testing and adjusting, Part 3	SEN01591-02 ●
40 Troubleshooting	SEN00799-02
Failure code table and fuse locations	SEN01691-02 ●
General information on troubleshooting	SEN01692-02 ●
Troubleshooting by failure code (Display of code), Part 1	SEN01693-02 ●
Troubleshooting by failure code (Display of code), Part 2	SEN01694-02 ●
Troubleshooting by failure code (Display of code), Part 3	SEN01695-02 ●
Troubleshooting by failure code (Display of code), Part 4	SEN01696-02 ●

Troubleshooting by failure code (Display of code), Part 5	SEN01697-02 ●
Troubleshooting by failure code (Display of code), Part 6	SEN01698-02 ●
Troubleshooting by failure code (Display of code), Part 7	SEN01699-02 ●
Troubleshooting by failure code (Display of code), Part 8	SEN01700-02 ●
Troubleshooting by failure code (Display of code), Part 9	SEN01701-01
Troubleshooting by failure code (Display of code), Part 10	SEN01702-02 ●
Troubleshooting of electrical system (E-mode)	SEN01703-02 ●
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01704-02 ●
Troubleshooting of engine (S-mode)	SEN01705-02 ●
 50 Disassembly and assembly	 SEN00800-01
General information on disassembly and assembly	SEN02202-01 ●
Engine and cooling system	SEN02203-01 ●
Power train, Part 1	SEN02204-01 ●
Power train, Part 2	SEN02205-01 ●
Undercarriage and frame	SEN02206-01 ●
Hydraulic system	SEN02207-01 ●
Work equipment	SEN02208-01 ●
Cab and its attachments	SEN02209-01 ●
Electrical system	SEN02210-01 ●
 90 Diagrams and drawings	 SEN00801-02
Hydraulic diagrams and drawings	SEN00805-00
Electrical diagrams and drawings	SEN00806-02

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$