

Shop Manual

WHEEL LOADER

WA470-6

WA480-6

SERIAL NUMBERS

WA470-90001

WA480-90001

and up

ecot3

KOMATSU

WHEEL LOADER

WA470-6

WA480-6

Machine model	Serial number
WA470-6	90001 and up
WA480-6	90001 and up

00 Index and foreword	
100 Index	

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title.....	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04409-06
00 Index and foreword	SEN04410-06
100 Index	SEN04418-06 ●
200 Foreword and general information	SEN04419-01
01 Specification	SEN04411-00
100 Specification and technical data.....	SEN04420-00
10 Structure, function and maintenance standard.....	SEN04412-01
100 Engine and cooling system	SEN04421-01
200 Power train	SEN04422-01
300 Steering system	SEN04423-01
400 Brake system	SEN04424-01
500 Undercarriage and frame	SEN04425-00
601 Hydraulic system, Part 1	SEN04426-00
602 Hydraulic system, Part 2	SEN04427-00
700 Work equipment.....	SEN04428-00
800 Cab and its attachments	SEN04429-01
901 Electrical system, Part 1	SEN04430-01
902 Electrical system, Part 2	SEN04431-01
903 Electrical system, Part 3	SEN04432-01
20 Standard value table.....	SEN04413-01
100 Standard service value table	SEN04515-01
30 Testing and adjusting	SEN04414-02
101 Testing and adjusting, Part 1.....	SEN04516-02
102 Testing and adjusting, Part 2.....	SEN04517-02
103 Testing and adjusting, Part 3.....	SEN04518-02
40 Troubleshooting.....	SEN04415-05
100 Failure code table and fuse locations	SEN04519-02
200 General information on troubleshooting.....	SEN04520-01
301 Troubleshooting by failure code (Display of code), Part 1	SEN04521-01
302 Troubleshooting by failure code (Display of code), Part 2	SEN04522-03 ●
303 Troubleshooting by failure code (Display of code), Part 3	SEN04523-03 ●

304 Troubleshooting by failure code (Display of code), Part 4.....	SEN04524-01
305 Troubleshooting by failure code (Display of code), Part 5.....	SEN04525-02
306 Troubleshooting by failure code (Display of code), Part 6.....	SEN04526-03 ●
307 Troubleshooting by failure code (Display of code), Part 7.....	SEN04527-02
308 Troubleshooting by failure code (Display of code), Part 8.....	SEN04528-04
309 Troubleshooting by failure code (Display of code), Part 9.....	SEN04529-01
310 Troubleshooting by failure code (Display of code), Part 10.....	SEN04530-01
400 Troubleshooting of electrical system (E-mode)	SEN04531-02
500 Troubleshooting of hydraulic and mechanical system (H-mode).....	SEN04532-02
600 Troubleshooting of engine (S-mode)	SEN04533-02
 50 Disassembly and assembly	SEN04416-01
100 General information on disassembly and assembly.....	SEN04534-01
200 Engine and cooling system	SEN04535-01
301 Power train, Part 1.....	SEN04536-01
302 Power train, Part 2.....	SEN04537-01
400 Brake system.....	SEN04866-01
500 Undercarriage and frame	SEN04538-01
600 Hydraulic system	SEN04539-00
700 Work equipment	SEN04540-00
800 Cab and its attachments.....	SEN04541-00
900 Electrical system	SEN04542-00
 80 Appendix.....	SEN05396-00
100 Air conditioner.....	SEN05397-00
 90 Diagrams and drawings.....	SEN04417-00
100 Hydraulic diagrams and drawings	SEN04433-00
200 Electrical diagrams and drawings.....	SEN04434-00

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$