

Shop Manual

WA470-7

WHEEL LOADER

SERIAL NUMBERS WA470-7 A47001 and up

ENGINE 6D125E-6

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2012 Komatsu
Printed in U.S.A.
Komatsu America Corp.

November 2012

WHEEL LOADER

WA470-7

Model	Serial Number
-------	---------------

WA470-7	A47001- and up
---------	----------------

00 Index and foreword

Index (ALL-0310-001-A-00-A)

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-18
Important safety notice	00-18
How to read the shop manual	00-25
Explanation of terms for maintenance standard	00-27
Handling equipment of fuel system devices	00-29
Handling of intake system parts	00-30
Handling of hydraulic equipment	00-31
Method of disconnecting and connecting of push-pull type coupler	00-33
Handling of electrical equipment	00-36
How to read electric wire code	00-44
Precautions when performing operation	00-47
Practical use of KOMTRAX	00-51
Standard tightening torque table	00-52
List of abbreviation	00-56
Conversion table	00-61
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Specifications	01-5
Weight table	01-11
Table of fuel, coolant, and lubricants	01-13
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-4
Engine related parts	10-4
KVG T	10-6
EGR system piping drawing	10-12
EGR system circuit diagram	10-14
EGR valve	10-15
EGR cooler	10-17
KCCV layout drawing	10-19
KCCV ventilator	10-21
KDPF	10-23
Cooling system	10-27
Cooling fan pump	10-30
Cooling fan motor	10-39
Power train	10-46
Power train system	10-46
Drive shaft	10-49
Power train piping drawing	10-50
Transmission control	10-51
Torque converter	10-54
Transmission	10-59
Transmission control valve	10-78
Forward and reverse clutch ECMV and 1st and 2nd clutch ECMV	10-81
3rd, 4th clutch ECMV	10-88
Lockup clutch ECMV	10-95
Main relief and torque converter relief valve	10-99
Axle	10-101
Differential	10-103
Final drive	10-113
Steering system	10-115
Layout of steering parts	10-115
Steering column	10-116

Steering pump	10-117
Steering valve	10-129
Orbit-roll valve	10-143
Stop valve	10-149
Emergency steering motor	10-150
Emergency steering pump	10-151
Brake system	10-152
Layout of brake parts	10-152
Charge valve	10-154
Brake valve	10-160
Slack adjuster	10-164
Accumulator (for brake)	10-167
Brake	10-168
Parking brake control	10-171
Parking brake	10-172
Parking brake solenoid valve	10-173
Parking brake emergency release valve	10-176
Undercarriage and frame	10-177
Axle mount and center hinge pin	10-177
Tire	10-178
Hydraulic system	10-180
Hydraulic component layout	10-180
Work equipment control	10-182
Hydraulic tank	10-183
Double type gear pump	10-186
Work equipment pump	10-187
Control valve	10-208
CLSS	10-217
Hydraulic circuit diagram and names of valves	10-221
Accumulator charge valve	10-232
Work equipment lock solenoid valve	10-236
Accumulator (for PPC circuit)	10-237
Accumulator (for ECSS)	10-238
Work equipment	10-239
Work equipment linkage	10-239
Bucket	10-240
Bucket positioner and boom positioner	10-241
Cab and its attachments	10-242
ROPS cab	10-242
Electrical system	10-243
Engine control system	10-243
Preheating system	10-245
Engine power mode selector circuit	10-247
Engine output limit function	10-248
Automatic warm-up function	10-249
Parking brake control system	10-250
System operating lamp function	10-252
Battery disconnect switch function	10-254
Transmission controller system	10-256
Work equipment control system	10-277
Machine monitor system	10-293
Rear view monitor system	10-317
KOMTRAX system	10-320
System component parts	10-323
Sensor	10-350
20 Standard value tables	20-1
Table of contents	20-2
Standard service value table	20-3
Standard value table for engine	20-3

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$