

Shop Manual

WHEEL LOADER

WA500-6

SERIAL NUMBERS 55001 and up

ecot3

KOMATSU

WHEEL LOADER

WA500-6

Machine model	Serial number
WA500-6	55001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents.....	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00236-23
00 Index and foreword	SEN00575-23
Index	SEN00701-23 ●
Foreword and general information	SEN00702-05
01 Specification	SEN00576-03
Specification and technical data	SEN00703-03
10 Structure, function and maintenance standard	SEN00577-07
Engine and cooling system	SEN00704-01
Power train, Part 1	SEN00705-03
Power train, Part 2	SEN00864-02
Steering system	SEN00706-03
Brake system	SEN00707-03
Undercarriage and frame	SEN00708-01
Hydraulic system, Part 1	SEN00709-02
Hydraulic system, Part 2	SEN00875-01
Work equipment	SEN00710-02
Cab and its attachments	SEN00711-01
Electrical system, Part 1	SEN00712-04
Electrical system, Part 2	SEN00713-02
Electrical system, Part 3	SEN00874-02
20 Standard value table	SEN00578-05
Standard service value table	SEN00724-05
30 Testing and adjusting	SEN00579-12
Testing and adjusting, Part 1	SEN00725-08
Testing and adjusting, Part 2	SEN00726-07
Testing and adjusting, Part 3	SEN00727-05
Testing and adjusting, Part 4	SEN00728-07
40 Troubleshooting	SEN00580-08
General information on troubleshooting	SEN00729-02
Troubleshooting by failure code (Display of code), Part 1	SEN00730-01

Troubleshooting by failure code (Display of code), Part 2	SEN00731-03
Troubleshooting by failure code (Display of code), Part 3	SEN00732-04
Troubleshooting by failure code (Display of code), Part 4	SEN00733-04
Troubleshooting by failure code (Display of code), Part 5	SEN00734-03
Troubleshooting by failure code (Display of code), Part 6	SEN00735-01
Troubleshooting by failure code (Display of code), Part 7	SEN00736-01
Troubleshooting by failure code (Display of code), Part 8	SEN00737-01
Troubleshooting by failure code (Display of code), Part 9	SEN00738-01
Troubleshooting by failure code (Display of code), Part 10	SEN00739-01
Troubleshooting of electrical system (E-mode)	SEN00740-03
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00741-00
Troubleshooting of engine (S-mode)	SEN00742-03
 50 Disassembly and assembly	 SEN00581-10
General information on disassembly and assembly	SEN02022-04
Engine and cooling system, Part 1	SEN02023-04
Engine and cooling system, Part 2	SEN02024-05
Power train, Part 1	SEN02025-06 ●
Power train, Part 2	SEN02026-06
Power train, Part 3	SEN02027-06 ●
Brake system	SEN02028-02
Undercarriage and frame	SEN02029-05
Hydraulic system	SEN02030-05
Work equipment	SEN02031-02
Cab and its attachments	SEN02032-05
Electrical system	SEN02033-04
 80 Appendix	 SEN06709-00
Air conditioner	SEN06710-00
 90 Diagrams and drawings	 SEN00582-09
Hydraulic diagrams and drawings	SEN00714-05
Electrical diagrams and drawings	SEN00715-05 ●

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$