

Shop Manual

WHEEL LOADER

WA500-6R

SERIAL NUMBERS 60001 and up

KOMATSU

WHEEL LOADER

WA500-6R

Machine model	Serial number
WA500-6R	60001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02876-12
00 Index and foreword	SEN02877-12
Index	SEN02885-12 ●
Foreword and general information	SEN02886-00
01 Specification	SEN02878-01
Specification and technical data	SEN02887-01
10 Structure, function and maintenance standard	SEN02879-04
Engine and cooling system	SEN02888-00
Power train, Part 1	SEN02889-00
Power train, Part 2	SEN02890-00
Steering system	SEN02891-01
Brake system	SEN02892-02 ●
Undercarriage and frame	SEN02893-00
Hydraulic system, Part 1	SEN02894-00
Hydraulic system, Part 2	SEN02895-00
Work equipment	SEN02896-01
Cab and its attachments	SEN02897-00
Electrical system, Part 1	SEN02898-02
Electrical system, Part 2	SEN02899-00
Electrical system, Part 3	SEN02900-00
20 Standard value table	SEN02880-02
Standard service value table	SEN02926-02
30 Testing and adjusting	SEN02881-07
Testing and adjusting, Part 1	SEN02927-04 ●
Testing and adjusting, Part 2	SEN02928-04 ●
Testing and adjusting, Part 3	SEN02929-02
Testing and adjusting, Part 4	SEN02930-04
40 Troubleshooting	SEN02882-05
Failure codes list and fuse locations	SEN02931-02
General information on troubleshooting	SEN02932-02

Troubleshooting by failure code (Display of code), Part 1	SEN02933-00
Troubleshooting by failure code (Display of code), Part 2	SEN02934-01
Troubleshooting by failure code (Display of code), Part 3	SEN02935-01
Troubleshooting by failure code (Display of code), Part 4	SEN02936-01
Troubleshooting by failure code (Display of code), Part 5	SEN02937-02
Troubleshooting by failure code (Display of code), Part 6	SEN02938-00
Troubleshooting by failure code (Display of code), Part 7	SEN02939-00
Troubleshooting by failure code (Display of code), Part 8	SEN02940-00
Troubleshooting by failure code (Display of code), Part 9	SEN02941-00
Troubleshooting by failure code (Display of code), Part 10	SEN02942-00
Troubleshooting of electrical system (E-mode)	SEN02944-02
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN02945-00
Troubleshooting of engine (S-mode)	SEN02946-02
 50 Disassembly and assembly	 SEN02883-06
General information on disassembly and assembly	SEN02903-02 ●
Engine and cooling system (SAA6D140E-5)	SEN02904-00
Engine (SAA6D140E-5)	SEN02905-02
Power train, Part 1	SEN02906-01
Power train, Part 2	SEN02907-03
Power train, Part 3	SEN02908-01
Brake system	SEN02909-01 ●
Undercarriage and frame	SEN02910-01
Hydraulic system	SEN02911-01
Work equipment	SEN02912-00
Cab and its attachments	SEN02913-03
Electrical system	SEN02914-00
 80 Appendix	 SEN06711-00
Air conditioner	SEN06712-00
 90 Diagrams and drawings	 SEN02884-06
Hydraulic diagrams and drawings	SEN02901-03
Electrical diagrams and drawings	SEN02902-03

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$