

Shop Manual

WHEEL LOADER

WA500-7

SERIAL NUMBERS 10001 and up

KOMATSU

WHEEL LOADER

WA500-7

Model	Serial Number
-------	---------------

WA500-7	10001 and up
---------	--------------

00 Index and foreword

Index (ALL-0310-001-A-00-A)

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-18
Important safety notice	00-18
How to read the shop manual	00-25
Explanation of terms for maintenance standard	00-27
Handling equipment of fuel system devices	00-29
Handling of intake system parts	00-30
Handling of hydraulic equipment	00-31
Method of disconnecting and connecting of push-pull type coupler	00-33
Handling of electrical equipment	00-36
How to read electric wire code	00-44
Precautions when performing operation	00-47
Practical use of KOMTRAX	00-51
Standard tightening torque table	00-52
List of abbreviation	00-56
Conversion table	00-61
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Specification	01-5
Weight table	01-12
Table of fuel, coolant, and lubricants	01-14
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-4
Engine related parts	10-4
KVG T	10-6
EGR system piping drawing	10-12
EGR system circuit diagram	10-14
EGR valve	10-15
EGR cooler	10-17
KCCV layout drawing	10-19
KCCV ventilator	10-21
KDPF	10-23
Engine mount and transmission mount	10-27
Joint	10-28
Cooling system	10-29
Cooling fan pump	10-33
Cooling fan motor	10-42
Power train	10-49
Power train system	10-49
Drive shaft	10-52
Power train piping drawing	10-53
Transmission control	10-54
Torque converter	10-56
Torque converter regulator valve	10-63
Transmission	10-65
Transfer	10-82
Transmission control valve	10-84
Forward and reverse clutch ECMV and gear speed clutch ECMV	10-87
Lockup clutch ECMV	10-94
Main relief valve, torque converter relief valve, and main flow selector valve	10-98
Torque converter oil cooler	10-103
Center support	10-104
Lubricating oil relief valve	10-105
Axle	10-106

Differential	10-110
Final drive	10-120
Steering system	10-122
Layout of steering parts	10-122
Steering column	10-123
Joystick steering lever linkage	10-124
Steering pump	10-125
Steering control valve	10-137
Orbitrol valve	10-147
Stop valve	10-153
Emergency steering piping diagram	10-154
Diverter valve	10-155
Emergency steering pump	10-159
Brake system	10-160
Layout of brake parts	10-160
Charge valve	10-162
Brake valve	10-168
Slack adjuster	10-173
Accumulator (for brake)	10-176
Brake	10-177
Parking brake control	10-179
Parking brake	10-180
Parking brake solenoid valve	10-182
Parking brake emergency release valve	10-185
Undercarriage and frame	10-186
Axle mount	10-186
Center hinge pin	10-187
Tire	10-189
Hydraulic system	10-191
Hydraulic component layout	10-191
Work equipment control	10-193
Hydraulic tank	10-195
Double type gear pump	10-198
Work equipment pump	10-199
Control valve	10-220
CLSS	10-229
Hydraulic circuit diagram and names of valves	10-233
Accumulator charge valve	10-245
Work equipment lock solenoid valve	10-249
Accumulator (for PPC circuit)	10-250
Accumulator (for ECSS)	10-251
Work equipment	10-252
Work equipment linkage	10-252
Bucket	10-253
Bucket positioner and boom positioner	10-255
Lubrication of work equipment	10-256
Cab and its attachments	10-258
ROPS cab	10-258
Electrical system	10-259
Engine control system	10-259
Preheating system	10-261
Power mode selector circuit	10-263
Engine output limit function	10-264
Automatic warm-up function	10-265
Parking brake control system	10-266
System operating lamp function	10-268
Battery disconnect switch function	10-270
Backup lamp and brake lamp	10-272
Clearance lamp and headlamp	10-274

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$