

Shop Manual

WA500-7

WHEEL LOADER

SERIAL NUMBERS **WA500-7** **A94001** and up

ENGINE **6D140E-6**

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

August 2012

Copyright 2012 Komatsu
Printed in U.S.A.
Komatsu America Corp.

WHEEL LOADER

WA500-7

Model

Serial Number

WA500-7

A94001 and up

00 Index and foreword

Index (ALL-0310-001-A-00-A)

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-18
Important safety notice	00-18
How to read the shop manual	00-25
Explanation of terms for maintenance standard	00-27
Handling equipment of fuel system devices	00-29
Handling of intake system parts	00-30
Handling of hydraulic equipment	00-31
Method of disconnecting and connecting of push-pull type coupler	00-33
Handling of electrical equipment	00-36
How to read electric wire code	00-44
Precautions when performing operation	00-47
Practical use of KOMTRAX	00-51
Standard tightening torque table	00-52
List of abbreviation	00-56
Conversion table	00-61
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Specification	01-5
Weight table	01-12
Table of fuel, coolant, and lubricants	01-14
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-4
Engine related parts	10-4
KVG T	10-6
EGR system piping drawing	10-12
EGR system circuit diagram	10-14
EGR valve	10-15
EGR cooler	10-17
KCCV layout drawing	10-19
KCCV ventilator	10-21
KDPF	10-23
Engine mount and transmission mount	10-27
Joint	10-28
Cooling system	10-29
Cooling fan pump	10-33
Cooling fan motor	10-42
Power train	10-49
Power train system	10-49
Drive shaft	10-52
Power train piping drawing	10-53
Transmission control	10-54
Torque converter	10-56
Torque converter regulator valve	10-63
Transmission	10-65
Transfer	10-82
Transmission control valve	10-84
Forward and reverse clutch ECMV and gear speed clutch ECMV	10-87
Lockup clutch ECMV	10-94
Main relief valve, torque converter relief valve, and main flow selector valve	10-98
Torque converter oil cooler	10-103
Center support	10-104
Lubricating oil relief valve	10-105
Axle	10-106

Differential	10-110
Final drive	10-120
Steering system	10-122
Layout of steering parts	10-122
Steering column	10-123
Joystick steering lever linkage	10-124
Steering pump	10-125
Steering control valve	10-137
Orbitrol valve	10-147
Stop valve	10-153
Emergency steering piping diagram	10-154
Diverter valve	10-155
Emergency steering pump	10-159
Brake system	10-160
Layout of brake parts	10-160
Charge valve	10-162
Brake valve	10-168
Slack adjuster	10-173
Accumulator (for brake)	10-176
Brake	10-177
Parking brake control	10-179
Parking brake	10-180
Parking brake solenoid valve	10-182
Parking brake emergency release valve	10-185
Undercarriage and frame	10-186
Axle mount	10-186
Center hinge pin	10-187
Tire	10-189
Hydraulic system	10-191
Hydraulic component layout	10-191
Work equipment control	10-193
Hydraulic tank	10-195
Double type gear pump	10-198
Work equipment pump	10-199
Control valve	10-220
CLSS	10-229
Hydraulic circuit diagram and names of valves	10-233
Accumulator charge valve	10-245
Work equipment lock solenoid valve	10-249
Accumulator (for PPC circuit)	10-250
Accumulator (for ECSS)	10-251
Work equipment	10-252
Work equipment linkage	10-252
Bucket	10-253
Bucket positioner and boom positioner	10-255
Lubrication of work equipment	10-256
Cab and its attachments	10-258
ROPS cab	10-258
Electrical system	10-259
Engine control system	10-259
Preheating system	10-261
Power mode selector circuit	10-263
Engine output limit function	10-264
Automatic warm-up function	10-265
Parking brake control system	10-266
System operating lamp function	10-268
Battery disconnect switch function	10-270
Backup lamp and brake lamp	10-272
Clearance lamp and headlamp	10-274

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$