

Shop Manual

WHEEL LOADER

WA600-6

SERIAL NUMBERS 60001 and up

ecot3

KOMATSU

WHEEL LOADER

WA600-6

Machine model Serial number

WA600-6

60001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00235-14
00 Index and foreword	SEN00397-14
Index	SEN00398-14 ●
Foreword and general information	SEN00415-03
01 Specification	SEN00399-02
Specification and technical data	SEN00400-02
10 Structure, function and maintenance standard	SEN00401-07
Engine and cooling system	SEN00402-01
Power train, Part 1	SEN00403-02
Power train, Part 2	SEN02455-01
Steering system	SEN00404-03
Brake system	SEN00405-01
Undercarriage and frame	SEN00406-00
Hydraulic system, Part 1	SEN00407-01
Hydraulic system, Part 2	SEN02456-00
Work equipment	SEN00408-03 ●
Cab and its attachments	SEN00409-01
Electrical system, Part 1	SEN01009-02
Electrical system, Part 2	SEN00410-02
Electrical system, Part 3	SEN00411-03
20 Standard value table	SEN00566-03
Standard service value table	SEN00552-03
30 Testing and adjusting	SEN00567-06
Testing and adjusting, Part 1	SEN00553-05 ●
Testing and adjusting, Part 2	SEN00554-04
Testing and adjusting, Part 3	SEN00555-06 ●
Testing and adjusting, Part 4	SEN00556-05 ●
40 Troubleshooting	SEN00568-03
Failure code table and fuse locations	SEN03364-01
General information on troubleshooting	SEN00557-01

Troubleshooting by failure code (Display of code), Part 1	SEN00558-02
Troubleshooting by failure code (Display of code), Part 2	SEN00559-03
Troubleshooting by failure code (Display of code), Part 3	SEN00560-02
Troubleshooting by failure code (Display of code), Part 4	SEN00561-03
Troubleshooting by failure code (Display of code), Part 5	SEN00562-03
Troubleshooting by failure code (Display of code), Part 6	SEN00569-03
Troubleshooting by failure code (Display of code), Part 7	SEN00570-03
Troubleshooting by failure code (Display of code), Part 8	SEN00571-03
Troubleshooting by failure code (Display of code), Part 9	SEN00572-03
Troubleshooting by failure code (Display of code), Part 10	SEN00573-03
Troubleshooting by failure code (Display of code), Part 11	SEN00574-03
Troubleshooting of electrical system (E-mode)	SEN00563-03
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00564-02
Troubleshooting of engine (S-mode)	SEN00565-02
 50 Disassembly and assembly	 SEN00583-06
General information on disassembly and assembly	SEN01156-03
Engine and cooling system, Part 1	SEN01157-02
Engine and cooling system, Part 2	SEN01158-03 ●
Power train, Part 1	SEN01160-02
Power train, Part 2	SEN01162-02
Power train, Part 3	SEN01164-03
Power train, Part 4	SEN01165-02
Brake system	SEN01167-02
Undercarriage and frame	SEN01169-02
Hydraulic system	SEN01171-02
Work equipment	SEN01174-02
Cab and its attachments	SEN01175-02
Electrical system	SEN01177-03
 90 Diagrams and drawings	 SEN00414-06
Hydraulic diagrams and drawings	SEN00412-03
Electrical diagrams and drawings	SEN00413-04

Table of contents

00 Index and foreword

Index	SEN00398-14
Composition of shop manual	2
Table of contents.....	4
Foreword and general information	SEN00415-03
Safety notice	2
How to read the shop manual	7
Explanation of terms for maintenance standard	9
Handling of electric equipment and hydraulic component	11
Handling of connectors newly used for engines	20
How to read electric wire code.....	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table.....	32
Conversion table	36

01 Specification

Specification and technical data	SEN00400-02
Specification and technical data	2
Specification dimension drawing.....	2
Specifications	3
Weight table	10
Table of fuel, coolant and lubricants	12

10 Structure, function and maintenance standard

Engine and cooling system	SEN00402-01
Engine and cooling system	2
Engine mount and transmission mount	2
Cooling system	6
Cooling fan pump.....	10
Cooling fan motor	18
Power train, Part 1	SEN00403-02
Power train, Part 1.....	2
Power train.....	2
Power train system diagram	3
Torque converter and transmission piping diagram	4
Torque converter.....	6
Modulation clutch.....	15
Torque converter regulator valve	16
Transmission.....	18
Transfer.....	38
Transmission control valve	40
ECMV	43
Main relief valve and torque converter relief valve	50
Lubrication relief valve	52
Power train, Part 2	SEN02455-01
Power train, Part 2.....	2
Torque converter oil cooler	2
Torque converter oil filter	3
Drive shaft.....	5
Center support	8
Axle	10
Differential.....	14
Limited slip differential	23

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$