

Shop Manual

WHEEL LOADER

WA600-6R

SERIAL NUMBERS 65001 and up

KOMATSU

WHEEL LOADER

WA600-6R

Machine model	Serial number
WA600-6R	65001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02211-08
00 Index and foreword	SEN02212-08
Index	SEN02213-08 ●
Foreword and general information	SEN02214-01
01 Specification	SEN02215-00
Specification and technical data	SEN02216-00
10 Structure, function and maintenance standard	SEN02217-03
Engine and cooling system	SEN02512-00
Power train, Part 1	SEN02513-00
Power train, Part 2	SEN02514-01
Steering system	SEN02515-01
Brake system	SEN02516-00
Undercarriage and frame	SEN02517-00
Hydraulic system, Part 1	SEN02518-00
Hydraulic system, Part 2	SEN02519-00
Work equipment	SEN02520-02 ●
Cab and its attachments	SEN02521-00
Electrical system, Part 1	SEN02522-01
Electrical system, Part 2	SEN02523-00
Electrical system, Part 3	SEN02524-00
20 Standard value table	SEN02218-02
Standard service value table	SEN02580-02
30 Testing and adjusting	SEN02219-04
Testing and adjusting, Part 1	SEN02581-03 ●
Testing and adjusting, Part 2	SEN02582-02
Testing and adjusting, Part 3	SEN02583-02 ●
Testing and adjusting, Part 4	SEN02584-03 ●
40 Troubleshooting	SEN02220-02
Failure code table and fuse locations	SEN02585-01
General information on troubleshooting	SEN02586-01
Troubleshooting by failure code (Display of code), Part 1	SEN02587-00

Troubleshooting by failure code (Display of code), Part 2	SEN02588-01
Troubleshooting by failure code (Display of code), Part 3	SEN02589-01
Troubleshooting by failure code (Display of code), Part 4	SEN02590-01
Troubleshooting by failure code (Display of code), Part 5	SEN02592-00
Troubleshooting by failure code (Display of code), Part 6	SEN02593-00
Troubleshooting by failure code (Display of code), Part 7	SEN02594-00
Troubleshooting by failure code (Display of code), Part 8	SEN02595-00
Troubleshooting by failure code (Display of code), Part 9	SEN02596-00
Troubleshooting by failure code (Display of code), Part 10	SEN02597-00
Troubleshooting by failure code (Display of code), Part 11	SEN02598-01
Troubleshooting of electrical system (E-mode)	SEN02599-01
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN02600-00
Troubleshooting of engine (S-mode)	SEN02601-02
 50 Disassembly and assembly	 SEN02221-05
General information on disassembly and assembly	SEN02994-01
Engine and cooling system, Part 1	SEN02995-00
Engine and cooling system, Part 2	SEN02996-02 ●
Power train, Part 1	SEN02997-00
Power train, Part 2	SEN02998-00
Power train, Part 3	SEN02999-02
Power train, Part 4	SEN03000-00
Brake system	SEN03001-00
Undercarriage and frame	SEN03002-00
Hydraulic system	SEN03003-01
Work equipment	SEN03004-00
Cab and its attachments	SEN03005-00
Electrical system	SEN03006-02
 90 Diagrams and drawings	 SEN02222-01
Hydraulic diagrams and drawings	SEN02525-00
Electrical diagrams and drawings	SEN02526-01

Table of contents

00 Index and foreword

Index	SEN02213-08
Composition of shop manual	2
Table of contents	4
Foreword and general information	SEN02214-01
Safety notice	2
How to read the shop manual	7
Explanation of terms for maintenance standard	9
Handling of electric equipment and hydraulic component	11
Handling of connectors newly used for engines	20
How to read electric wire code	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table	32
Conversion table	36

01 Specification

Specification and technical data	SEN02216-00
Specification dimension drawing	2
Specifications	3
Weight table	10
Table of fuel, coolant and lubricants	12

10 Structure, function and maintenance standard

Engine and cooling system	SEN02512-00
Engine mount and transmission mount	2
Cooling system	6
Cooling fan pump	10
Cooling fan motor	18
Power train, Part 1	SEN02513-00
Power train	2
Power train system diagram	3
Torque converter and transmission piping diagram	4
Torque converter	6
Modulation clutch	15
Torque converter regulator valve	16
Transmission	18
Transfer	38
Transmission control valve	40
ECMV	42
Main relief valve and torque converter relief valve	49
Lubrication relief valve	51
Power train, Part 2	SEN02514-01
Torque converter oil cooler	2
Torque converter oil filter	3
Drive shaft	5
Center support	8
Axle	10
Differential	14
Limited slip differential	23
Final drive	28
Steering system	SEN02515-01
Steering piping diagram	4
Steering column	6

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$