

Shop Manual

WHEEL LOADER

WA600-6R

SERIAL NUMBERS 65001 and up

KOMATSU

WHEEL LOADER

WA600-6R

Machine model	Serial number
WA600-6R	65001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02211-11
00 Index and foreword	SEN02212-11
Index	SEN02213-11 ●
Foreword and general information	SEN02214-02
01 Specification	SEN02215-01
Specification and technical data	SEN02216-01
10 Structure, function and maintenance standard	SEN02217-04
Engine and cooling system	SEN02512-00
Power train, Part 1	SEN02513-00
Power train, Part 2	SEN02514-01
Steering system	SEN02515-01
Brake system	SEN02516-01 ●
Undercarriage and frame	SEN02517-00
Hydraulic system, Part 1	SEN02518-00
Hydraulic system, Part 2	SEN02519-01 ●
Work equipment	SEN02520-02
Cab and its attachments	SEN02521-00
Electrical system, Part 1	SEN02522-01
Electrical system, Part 2	SEN02523-00
Electrical system, Part 3	SEN02524-00
20 Standard value table	SEN02218-03
Standard service value table	SEN02580-03 ●
30 Testing and adjusting	SEN02219-05
Testing and adjusting, Part 1	SEN02581-03
Testing and adjusting, Part 2	SEN02582-03 ●
Testing and adjusting, Part 3	SEN02583-02
Testing and adjusting, Part 4	SEN02584-03
40 Troubleshooting	SEN02220-02
Failure code table and fuse locations	SEN02585-01
General information on troubleshooting	SEN02586-01
Troubleshooting by failure code (Display of code), Part 1	SEN02587-00

Troubleshooting by failure code (Display of code), Part 2	SEN02588-01
Troubleshooting by failure code (Display of code), Part 3	SEN02589-01
Troubleshooting by failure code (Display of code), Part 4	SEN02590-01
Troubleshooting by failure code (Display of code), Part 5	SEN02592-00
Troubleshooting by failure code (Display of code), Part 6	SEN02593-00
Troubleshooting by failure code (Display of code), Part 7	SEN02594-00
Troubleshooting by failure code (Display of code), Part 8	SEN02595-00
Troubleshooting by failure code (Display of code), Part 9	SEN02596-00
Troubleshooting by failure code (Display of code), Part 10	SEN02597-00
Troubleshooting by failure code (Display of code), Part 11	SEN02598-01
Troubleshooting of electrical system (E-mode)	SEN02599-01
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN02600-00
Troubleshooting of engine (S-mode)	SEN02601-02
 50 Disassembly and assembly	 SEN02221-05
General information on disassembly and assembly	SEN02994-01
Engine and cooling system, Part 1	SEN02995-00
Engine and cooling system, Part 2	SEN02996-02
Power train, Part 1	SEN02997-00
Power train, Part 2	SEN02998-00
Power train, Part 3	SEN02999-02
Power train, Part 4	SEN03000-00
Brake system	SEN03001-00
Undercarriage and frame	SEN03002-00
Hydraulic system	SEN03003-01
Work equipment	SEN03004-00
Cab and its attachments	SEN03005-00
Electrical system	SEN03006-02
 90 Diagrams and drawings	 SEN02222-02
Hydraulic diagrams and drawings	SEN02525-01 ●
Electrical diagrams and drawings	SEN02526-01

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$