

Shop Manual

WHEEL LOADER

WA700-8

SERIAL NUMBERS 70001 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Foreword, Safety, Basic Information	00-24
How to Read the Shop Manual	00-24
Safety Notice for Operation	00-26
Precautions to Prevent Fire	00-34
Procedures If Fire Occurs	00-36
Precautions for Disposing of Waste Materials	00-37
Engine Technology to Conform Exhaust Gas Emission	00-38
Precautions When You Handle Hydraulic Equipment	00-39
Precautions When You Disconnect and Connect Pipings	00-42
Precautions When You Handle Electrical Equipment	00-49
Precautions When You Handle Fuel System Equipment	00-51
Precautions When You Handle Intake System Equipment	00-52
Practical Use of KOMTRAX	00-53
Disconnect and Connect Push-Pull Type Coupler	00-54
Precautions for Disconnection and Connection of Connectors	00-58
How to Disconnect and Connect Deutsch Connector	00-63
How to Disconnect and Connect Slide Lock Type Connector	00-64
How to Disconnect and Connect Connector with Lock to Pull	00-71
How to Disconnect and Connect Connector with Lock to Push	00-72
How to Disconnect and Connect Connector with Housing to Rotate	00-75
Standard Tightening Torque Table	00-76
Conversion Table	00-83
Abbreviation List	00-88
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Specifications	01-5
Weight Table	01-10
Fuel, Coolant, Lubricant	01-12
10 Structure and Function	10-1
Table of Contents	10-2
Boot-up System	10-8
Layout Drawing of Boot-up System	10-8
System Operating Lamp System	10-10
Battery Disconnect Switch	10-11
Starting Motor Disconnect Switch	10-12
Preheating System	10-13
Engine Shutdown Secondary Switch	10-15
Emergency Engine Stop Switch	10-16
External Power Supply Engine Preheater	10-17
Engine System	10-18
Layout Drawing of Engine System	10-18
Engine Control System	10-20
Engine Power Mode Selector System	10-24
Automatic Idle Stop System	10-25
RPM Set	10-26
Component Parts of Engine System	10-30
Cooling System	10-51
Layout Drawing of Cooling System	10-51
Cooling Fan Control System	10-54
Component Parts of Cooling System	10-58
Control System	10-74
Layout Drawing of Control System	10-74
Machine Monitor System	10-76

Rearview Monitor System	10-78
KOMTRAX Plus System	10-79
Load Meter System	10-81
Machine Lock-out System	10-86
Component Parts of Control System	10-89
Hydraulic System	10-153
Layout Drawing of Hydraulic System	10-153
CLSS	10-154
Work Equipment Pump Control System	10-157
Steering Pump Control System	10-159
Component Parts of Hydraulic System	10-160
Power Train System	10-236
Layout Drawing of Power Train System	10-236
Transmission Control System	10-240
Transmission Gear Shift Control System	10-242
Transmission Protection Function	10-247
Tire Slip Control System	10-252
Component Parts of Power Train System	10-254
Work Equipment System	10-318
Layout Drawing of Work Equipment System	10-318
Work Equipment System Diagram	10-320
Work Equipment Control System	10-322
Work Equipment Neutral Lock System	10-329
Remote Positioner System	10-331
Bucket Positioner and Boom Positioner	10-336
Auto-Digging System	10-337
Semi-Auto Approach System	10-340
Semi-Auto Dump System	10-341
ECSS	10-343
Wall Digging Prevention Control System	10-346
Component Parts of Work Equipment System	10-348
Steering System	10-354
Layout Drawing of Steering System	10-354
Secondary Steering System	10-355
AJSS	10-356
Steering Lock System	10-363
Component Parts of Steering System	10-364
Brake System	10-392
Layout Drawing of Brake System	10-392
Parking Brake Control System	10-395
Component Parts of Brake System	10-397
Auto-Greasing System	10-422
Layout Drawing of Auto-Greasing System	10-422
Auto-Greasing System Diagram	10-425
Specifications of Auto-Greasing System	10-426
Function of Auto-Greasing System	10-426
Auto-Greasing System	10-427
Lifting System	10-431
Power Ladder System	10-431
Power Ladder System	10-435
Service Center	10-440
Layout Drawing of Service Center	10-440
Function of Service Center	10-441
KOWA Oil Sampling System	10-442
Layout Drawing of KOWA Oil Sampling System	10-442
Function of KOWA Oil Sampling System	10-443
Undercarriage and Frame	10-444
Frame, Axle Mount and Hinge Pin	10-444

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$