

SERVICE MANUAL

B95C / B95C TC / B110C

TIER 4B (FINAL)

Tractor Loader Backhoe

PIN NZHH03067 and after

Part number 51611166

English
June 2020





SERVICE MANUAL

B110C TIER 4B (FINAL), CENTER PIVOT (CP), FOUR-WHEEL DRIVE (4WD)

[NZHH03067 -]

B95C TC TIER 4B (FINAL), CENTER PIVOT (CP), FOUR-WHEEL DRIVE (4WD)

[NZHH03067 -]

B95C TIER 4B (FINAL), CENTER PIVOT (CP), FOUR-WHEEL DRIVE (4WD)

[NZHH03067 -]

B95C TIER 4B (FINAL), CENTER PIVOT (CP), TWO-WHEEL DRIVE (2WD)

[NZHH03067 -]

Link Product / Engine

Product	Market Product	Engine
B110C TIER 4B (FINAL), CENTER PIVOT (CP), FOUR-WHEEL DRIVE (4WD) [NZHH03067 -]	North America	F5BFL413A*B007
B110C TIER 4B (FINAL), CENTER PIVOT (CP), FOUR-WHEEL DRIVE (4WD) [NZHH03067 -]	Latin America	F5BFL413A*B007
B95C TIER 4B (FINAL), CENTER PIVOT (CP), TWO-WHEEL DRIVE (2WD) [NZHH03067 -]	North America	F5BFL413A*B007
B95C TIER 4B (FINAL), CENTER PIVOT (CP), TWO-WHEEL DRIVE (2WD) [NZHH03067 -]	Latin America	F5BFL413A*B007
B95C TIER 4B (FINAL), CENTER PIVOT (CP), FOUR-WHEEL DRIVE (4WD) [NZHH03067 -]	Latin America	F5BFL413A*B007
B95C TIER 4B (FINAL), CENTER PIVOT (CP), FOUR-WHEEL DRIVE (4WD) [NZHH03067 -]	North America	F5BFL413A*B007
B95C TC TIER 4B (FINAL), CENTER PIVOT (CP), FOUR-WHEEL DRIVE (4WD) [NZHH03067 -]	North America	F5BFL413A*B007
B95C TC TIER 4B (FINAL), CENTER PIVOT (CP), FOUR-WHEEL DRIVE (4WD) [NZHH03067 -]	Latin America	F5BFL413A*B007

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.103] Crankshaft and flywheel.....	10.2
[10.216] Fuel tanks	10.3
[10.206] Fuel filters	10.4
[10.218] Fuel injection system.....	10.5
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.6
[10.400] Engine cooling system	10.7
[10.414] Fan and drive	10.8
Transmission.....	21
[21.112] Power shuttle transmission.....	21.1
[21.134] Power shuttle transmission external controls	21.2
[21.104] Power shuttle transmission hydraulic components	21.3
[21.154] Power shuttle transmission internal components	21.4
[21.113] Powershift transmission	21.5
[21.135] Powershift transmission external controls.....	21.6
[21.105] Powershift transmission hydraulic components	21.7
[21.155] Powershift transmission internal components.....	21.8
[21.145] Gearbox internal components.....	21.9
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.400] Non-powered front axle	25.4
Rear axle system.....	27

[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.106] Variable displacement pump	35.4
[35.350] Safety and main relief valves	35.5
[35.357] Pilot system	35.6
[35.355] Hydraulic hand control	35.7
[35.352] Hydraulic swing system	35.8
[35.724] Front loader hydraulic system control.....	35.9
[35.701] Front loader arm hydraulic system	35.10
[35.723] Front loader bucket hydraulic system.....	35.11
[35.726] Excavator and backhoe hydraulic controls.....	35.12
[35.736] Boom hydraulic system	35.13
[35.737] Dipper hydraulic system.....	35.14
[35.738] Excavator and backhoe bucket hydraulic system.....	35.15
[35.739] Swing arm hydraulic system	35.16
[35.703] Stabilizer hydraulic system.....	35.17
[35.740] Telescopic arm hydraulic system.....	35.18
Frames and ballasting	39
[39.100] Frame	39.1
[39.140] Ballasts and supports	39.2

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$