

REPAIR MANUAL



D75
D85
D95

Contents

INTRODUCTION

DISTRIBUTION SYSTEMS A

PRIMARY HYDRAULIC POWER SYSTEM	A.10.A
SECONDARY HYDRAULIC POWER SYSTEM	A.12.A
ELECTRICAL POWER SYSTEM	A.30.A
LIGHTING SYSTEM	A.40.A
FAULT CODES	A.50.A

POWER PRODUCTION B

ENGINE	B.10.A
FUEL AND INJECTION SYSTEM	B.20.A
AIR INTAKE SYSTEM	B.30.A
ENGINE COOLANT SYSTEM	B.50.A
LUBRICATION SYSTEM	B.60.A
STARTING SYSTEM	B.80.A

POWER TRAIN C

POWER COUPLING Fixed coupling	C.10.B
TRANSMISSION Hydrostatic	C.20.F

TRAVELLING D

SERVICE BRAKE Hydraulic	D.30.C
PARKING BRAKE Hydraulic	D.32.C
WHEELS AND TRACKS Tracks	D.50.B
Final drive	D.15.A

BODY AND STRUCTURE E

USER CONTROLS AND SEAT	E.32.A
USER PLATFORM	E.34.A
ENVIRONMENT CONTROL Heating system	E.40.B
ENVIRONMENT CONTROL Air-conditioning system	E.40.C
ENVIRONMENT CONTROL Heating, ventilation and air-conditioning	E.40.D

SAFETY SECURITY ACCESSORIES Safety	E.50.B
------------------------------------	--------

USER CONTROLS AND SEAT Operator seat	E.32.C
--------------------------------------	--------

TOOL POSITIONING	G
------------------	---

LIFTING	G.10.A
---------	--------

TILTING	G.20.A
---------	--------

SWINGING	G.40.A
----------	--------

WORKING ARM	H
-------------	---

SINGLE ARM TOOL ATTACHMENT Lift	H.50.B
---------------------------------	--------

TOOLS AND COUPLERS	J
--------------------	---

DIGGING Non-articulated digging tools	J.20.B
---------------------------------------	--------

LANDSCAPING Dozer blade	J.40
-------------------------	------

SCHEMATICS	
------------	--

Electrical	5-6290
------------	--------

Electrical and Hydraulic	6-76601
--------------------------	---------

(Located in the Rear Pocket of the Manual Binder)

ENGINE REPAIR MANUAL	6-80940
----------------------	---------

(Not included) Can be ordered from your Local Dealer

INTRODUCTION

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$