

SERVICE MANUAL

L334

Tier 4B (final) / Stage IV

300 Series Skid Steer Loader

PIN NJM453496 and after

C334 / C345

Tier 4B (final) / Stage IV

300 Series Compact Track Loader

PIN NJM453496 and after

Part number 51509567

English

October 2020





SERVICE MANUAL

**C334
C345
L334**

Link Product / Engine

Product	Market Product	Engine
C334 STAGE IV [NJM453496 -]	Europe	F5BFL413D*C001
C334 TIER 4B (FINAL) [NJM453496 -]	North America	F5BFL413D*C001
C334 TIER 4B (FINAL) [NJM453496 -]	Australia New Zealand	F5HFL463A*G001
C345 TIER 4B (FINAL) [NJM453496 -]	Middle East Africa	F5BFL413D*C001
C345 TIER 4B (FINAL) [NJM453496 -]	North America	F5BFL413D*C001
C345 TIER 4B (FINAL) [NJM453496 -]	Australia New Zealand	F5HFL463A*G001
C345 TIER 4B (FINAL) [NJM453496 -]	Asia Pacific	F5BFL413D*C001
C345 STAGE IV [NJM453496 -]	Europe	F5BFL413D*C001
L334 TIER 4B (FINAL) [NJM453496 -]	North America	F5BFL413D*C001
L334 TIER 4B (FINAL) [NJM453496 -]	Australia New Zealand	F5HFL463A*G001
L334 TIER 4B (FINAL) [NJM453496 -]	Asia Pacific	F5BFL413D*C001
L334 TIER 4B (FINAL) [NJM453496 -]	Middle East Africa	F5BFL413D*C001
L334 STAGE IV [NJM453496 -]	Europe	F5BFL413D*C001

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.206] Fuel filters	10.3
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment	10.4
[10.400] Engine cooling system	10.5
[10.414] Fan and drive	10.6
[10.310] Aftercooler.....	10.7
[10.304] Engine lubrication system	10.8
Power coupling.....	19
[19.121] Pump-drive assembly	19.1
Front axle system	25
[25.450] Chain drive system.....	25.1
Rear axle system.....	27
[27.650] Chain drive system.....	27.1
Hydrostatic drive.....	29
[29.200] Mechanical control	29.1
[29.218] Pump and motor components.....	29.2
[29.202] Hydrostatic transmission	29.3
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.359] Main control valve.....	35.4
[35.525] Auxiliary hydraulic valves and lines	35.5

[35.600] High flow hydraulics	35.6
[35.724] Front loader hydraulic system control	35.7
[35.701] Front loader arm hydraulic system	35.8
[35.723] Front loader bucket hydraulic system	35.9
[35.734] Tool quick coupler hydraulic system	35.10
Frames and ballasting	39
[39.140] Ballasts and supports	39.1
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Tracks and track suspension	48
[48.130] Track frame and driving wheels	48.1
[48.100] Tracks	48.2
[48.134] Track tension units	48.3
[48.138] Track rollers	48.4
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors.....	55.2
[55.525] Cab engine controls	55.3
[55.015] Engine control system.....	55.4
[55.201] Engine starting system	55.5
[55.301] Alternator.....	55.6
[55.302] Battery.....	55.7
[55.011] Fuel tank system	55.8

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$