

SERVICE MANUAL

M427 / M428 / M459

Series M Telehandlers

Print No. 87755802D



M427/M428/M459

TELEHANDLERS

Workshop Manual

Print N. 87755802D (VII - 2010)



THIS ALERT SYMBOL SIGNALS IMPORTANT MESSAGES INVOLVING YOUR SAFETY.

Read and heed carefully the safety instructions listed and follow the precautions recommended to avoid potential risks and to safeguard your health and your safety.

You will find this symbol in the text of this Manual referred to the following key words:

WARNING - Cautions directed to avoid improper repair interventions involving potential consequences for the operator's safety.

DANGER - These warnings qualify specifically potential dangers for the safety of the operator or other persons directly or indirectly involved.

IMPORTANT NOTICE

All maintenance and repair interventions explained in this Manual **must be performed exclusively by the Service Organization of the Manufacturer**, observing strictly the instructions explained using, whenever necessary, the recommended specific tools.

Whoever performs the operations reported without following exactly the precautions is responsible on his own, for the damages that may result.

In any case, no warranty of any kind is made or shall be imposed with respect to products manufactured or merchandized by the Factory, when failures are caused by the use of parts and/or components not approved by the Factory.

Neither the Factory nor any Organizations in its Distribution Network, including but not limited to national, regional or local distributors, are responsible for any liability arising from any damage resulting from defects caused by parts and/or components not approved by the Factory for use in maintaining and/or repairing products manufactured or merchandized by the Factory.

In any case, no warranty of any kind is made or shall be imposed with respect to products manufactured or merchandized by the Factory, when failures are caused by the use of parts and/or components not approved by the Factory.

AVOID ACCIDENTS

Most accidents and injuries occurring in industry, on the farm, at home or on the road, are caused by the failure of some individual to follow simple and fundamental safety rules or precautions. For this reason, **MOST ACCIDENTS CAN BE PREVENTED** by recognizing the real cause and taking the necessary precautions, before the accident occurs.

Regardless of the care used in design and construction of any type of equipment, there may be conditions that cannot be completely safeguarded against without interfering with reasonable accessibility and efficient operation.

A careful operator is the best insurance against accidents. The complete observance of one simple rule would prevent many thousands serious injuries each year.

This rule is: Never attempt to clean, lubricate or adjust a machine while it is in motion.



ATTENTION

On machines having hydraulically, mechanically and/or cable controlled equipment (such as showels, loaders, dozers, scrapers etc.) be certain the equipment is lowered to the ground before servicing, adjusting and/or repairing.

If it is necessary to have the equipment partially or fully raised to gain access to certain items, be sure the equipment is suitably supported by means other than the hydraulic lift cylinders, cable and/or mechanical device used for controlling the equipment.

MODEL CODES

The complete range of telescopic handlers (Telehandler) described in this manual is identified in the text by reference to the maximum extension of the telescopic arm.

The vehicles listed below may not be available in all countries or markets, therefore for the latest information consult your authorized dealer.

Model	M427	M428	M459
	no Stab.	with Stab.	with Stab.
Engine	101 hp (74 kw)	120 hp (88 kw)	120 hp (88 kw)
Max. lifting height ft (m)	41.8 (12.74)	41.8 (12.74)	44.6 (13.60)
Max. capacity lb (kg) at 24 in (610 mm) in from fork stop	6600 (2994)	8000 (3629)	9000 (4082)
Capacity at max. height lb (kg) with rear axle lock	6000 (2720)	6000 (2720)	7000 (3175)
Reach at max. height ft (m)	5 (1.523)	5 (1.523)	3.45 (1.053)
Max. longitudinal extension ft (m)	29 (8.800)	29 (8.800)	30.84 (9.400)
Capacity at max. extension lb (kg)	1300 (544)	1600 (816)	1600 (726)
Weight lb (kg)	22700 (10300)	24930 (11300)	27778 (12600)
Length without forks in (m)	241.33 (6.130)	241.53 (6.135)	249.76 (6.344)
Overall length in (m)	287.80 (7.310)	288 (7.315)	296.20 (7.524)

Workshop Manual

M427/M428/M459

TELEHANDLERS

GENERAL LIST OF CONTENTS

SECTION 00 - GENERAL

Description	Page
General instructions	1
Safety rules	3
Product identification	6
Environmental considerations	10
Maintenance techniques	11

SECTION 10 - ENGINE

Description	Page
Main specifications of engines	2
Troubleshooting	5
Generalities engine F4GE9484F*J600/F4GE9484J*J600	19
Removal and installation of the motor and the radiator	24
Special tools	36

SECTION 21 - POWERSHIFT GEARBOX

Description	Page
Powershift Gearbox 4x4	2
Driving with the powershift gearbox	2
Gearbox assembly	5
Idler gear case assembly	7
Gearbox operation	8
Transmission and Hydraulic oil circuit diagrams	15
Modulation valve operation	31
Torque converter and heat exchanger hydraulic oil circuit	34
Troubleshooting guide	35
Troubleshooting procedures	35
Troubleshooting	37
Pressure testing clutch and high pressure circuit	38
Pressure testing torque converter and cooler circuit	39
Check points	40
Assembly instructions	42
Overhaul	46
Special tools	114

SECTION 25 - FRONT AXLE

Description	Page
Specifications	2
Description front axle STD assy	3
Description front axle LSD assy	4
Operation	5
Troubleshooting	6
Wheel toe-in check	7
Component overhaul	7
Front axle removal procedure	8
Front axle overhaul	9
How to disassemble the limited slip differential unit	51
How to install and adjust the axle drive pinion	63
Front drive shaft	72

SECTION 27 - REAR AXLE

Description	Page
Specifications	2
Description	3
Operation diagram	5
Component overhaul	7
Rear axle removal procedure	7
Overhaul	8
Special tools	9

SECTION 33 - BRAKES

Description	Page
Specifications	1
Power brakes	2
Parking brake	4
Brake disc adjustment	8
Troubleshooting	9
Brakes disassembly	10

SECTION 35 - HYDRAULIC SYSTEM

Description	Page
Technical data	2
Description and operation	3
Introduction	3
Steering valve	3
Telescopic boom hydraulic circuit	4

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$