

TELEHANDLERS**M427
M428
M459****REPAIR
MANUAL**

87755802 NA
Replaces 87658881 NA

Issued 01May 07
Revised 01Dec 07



REPAIR MANUAL

TELEHANDLERS

M427

M428

M459

CNH America LLC reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

All data given in this publication is subject to production variations. Dimensions and weights are only approximate. Illustrations do not necessarily show products in standard condition. For exact information about any particular product, please consult your Dealer.

REVISION HISTORY			
Issue	Issue Date	Applicable Machines	Remarks
First Edition	01May 07	M427, M428, M459 Telehandlers	87658881 NA
Revision 1	01Dec 07	M427, M428, M459 Telehandlers	87755802 NA

Workshop Manual

M427/M428/M459

TELEHANDLERS

GENERAL LIST OF CONTENTS

SECTION 00 - GENERAL

Description	Page
General instructions	1
Safety rules	3
Product identification	6
Environmental considerations	11
Maintenance techniques	12

SECTION 10 - ENGINE

Description	Page
Main specifications of engines	2
Troubleshooting	5
Generalities engine F4GE9484F*J600/F4GE9484J*J600	19
Removal and installation of the motor and the radiator	24
Spaecial tools	36

SECTION 21 - POWERSHIFT GEARBOX

Description	Page
Powershift Gearbox 4x4	2
Driving with the powershift gearbox	2
Gearbox assembly	5
Idler gear case assembly	7
Gearbox operation	8
Transmission and Hydraulic oil circuit diagrams	15
Modulation valve operation	31
Torque converter and heat exchanger hydraulic oil circuit	34
Troubleshooting guide	35
Troubleshooting procedures	35
Troubleshooting	37
Pressure testing clutch and high pressure circuit	38
Pressure testing torque converter and cooler circuit	39
Check points	40
Assembly instructions	42
Overhaul	45
Special tools	104

SECTION 25 - FRONT AXLE

Description	Page
Specifications	1
Description	2
Operation	3
Troubleshooting	4
Wheel toe-in check	5
Component overhaul	5
Front axle removal procedure	6
Front axle overhaul	7
Axle drive pinion bearing adjustment	52
How to install and adjust the axle drive pinion	54
Front drive shaft	57

SECTION 27 - REAR AXLE

Description	Page
Specifications	1
Description	2
Operation diagram	3
Component overhaul	5
Rear axle removal procedure	5
Overhaul	6
Special tools	7

SECTION 33 - BRAKES

Description	Page
Specifications	1
Power brakes	2
Parking brake	4
Brake disc adjustment	11
Troubleshooting	12
Brakes disassembly	13

SECTION 35 - HYDRAULIC SYSTEM

Description	Page
Technical data	2
Description and operation	3
Introduction	3
Steering valve	3
Telescopic boom hydraulic circuit	4
Component operation	13

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$