



LOADER LANDSCAPER

**U80B
TIER 3**

**REPAIR
MANUAL**

87728505 NA

Issued 01Aug 08



U80B TIER 3 LOADER LANDSCAPER

Repair Manual

Bur 87728505

Table of Contents

Description	Section Number	Publication Form Number
General	Tab 1	
Section Index - General		5-13670
Standard Torque Specifications	1001	6-80470
Fluids and Lubricants	1002	5-13680
Metric Conversion Chart	1003	6-80690
Engine	Tab 2	
Section Index - Engine		5-13690
Engine and Radiator Removal and Installation	2000	5-13700
Stall Test	2002	5-14070
Diagnosing Engine Oil Consumption	2445	5-14120
Counter Balance Removal and Installation	2447	5-14080
Turbocharger Diagnosis Procedure Family 3 Engines	2465	5-14130
<i>NOTE: For Engine Repair See Engine Repair Manual 87630274.</i>		
Fuel System	Tab 3	
Section Index - Fuel System		5-13710
In Vehicle Injector Pump Removal, Installation and Static Timing	3416	5-13720
<i>NOTE: For Fuel System Repair See Engine Repair Manual 87630274.</i>		
Electrical	Tab 4	
Section Index - Electrical		5-13730
Removal and Installation of Electrical Components	4001	5-13740
Electrical Specifications and Troubleshooting	4002	5-14140
Batteries	4003	5-13750
Instrument Cluster	4005	5-13760
Steering	Tab 5	
Section Index - Steering		5-13770
Removal and Installation of Steering Components	5001	5-13780
Steering Specification, Pressure Checks and Troubleshooting	5002	5-13790
Steering Control Valve	5003	6-81900
Steering Cylinders	5004	6-81910
Front Axle - Two Wheel Drive	5005	5-14160
Front Axle - Four Wheel Drive	5006	5-13800

U80B TIER 3 LOADER LANDSCAPER

Repair Manual

Bur 87728505

Table of Contents (Continued)

Description	Section Number	Publication Form Number
Power Train	Tab 6	
Section Index - Power Train		5-13810
Removal and Installation of Power Train Components	6001	5-13820
Standard Transmission Specifications, Pressure Checks, and Troubleshooting	6002	5-13830
Wheels and Tires	6003	5-13840
Rear Axle and Planetaries	6004	5-13850
Standard Transmission	6007	5-13860
Brakes	Tab 7	
Section Index - Brakes		5-13870
Removal and Installation of Brake Components	7001	5-13880
Master Cylinder	7003	5-14110
Hydraulics	Tab 8	
Section Index - Hydraulics		5-13890
Removal and Installation of Hydraulic Components	8001	5-13900
Hydraulic System Specifications and Troubleshooting	8002	5-13910
Cleaning the Hydraulic System and Hydrostatic System	8003	5-13920
Loader Control Valve	8005	5-13940
Cylinders	8006	5-13950
Three Point Hitch Control Valve	8007	5-13960
Accumulator for Machines With Optional Glide Ride	8009	5-13970
Solenoid Valve for Machines with Optional Glide Ride	8010	5-13980
Flow Control Valve	8011	5-1140
Lock Valve	8012	5-1150
Mounted Equipment	Tab 9	
Section Index - Mounted Equipment		5-13990
Pedals and Levers	9001	5-14000
Air Conditioning Troubleshooting	9002	5-14010
Air Conditioning System Service	9004	5-14020
Air Conditioning Components Service	9005	5-14030
Loader	9006	5-14040
ROPS Cab and Canopy	9007	5-14050
Standard and Mechanical Suspension Seat	9009	5-14060
Plug-in Weight	9010	5-14150

U80B TIER 3 LOADER LANDSCAPER
Repair Manual
Bur 87728505

Table of Contents (Continued)

Description	Section Number	Publication Form Number
Schematic Set		
Hydraulic and Electrical Schematics	In Rear Pocket	5-13650

NOTE: CNH Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

SECTION INDEX
GENERAL

Section Title	Section Number
Standard Torque Specifications	1001
Fluid and Lubricants	1002
Metric Conversion Chart	1003

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$