

SERVICE MANUAL

W50C

W60C

W70C

W80C

Tier 4B (final)

Compact Wheel Loader

Part number 51650974

English
May 2019





SERVICE MANUAL

**W50C TC CWL W50C TIER 4 XT [FNHW50CSNKHP01224 -], W50C ZB
CWL W50C TIER4 Z-BAR [FNHW50CSNKHP01224 -], W60C TC CWL
W60C TIER 4 XT [FNHW60CSNKHP01222 -], W60C ZB CWL W60C TIER4
Z-BAR [FNHW60CSNKHP01222 -], W70C CWL W70C TIER4 Z-BAR
STD [FNHW70CSNKHP01220 -], W70C HS CWL W70C TIER4 HIGH
SPEED [FNHW70CSNKHP01220 -], W80C CWL W80C TIER4 Z-BAR STD
[FNHW80CSNKHP01219 -], W80C HS CWL W80C TIER4 HIGH SPEED
[FNHW80CSNKHP01219 -]**

Link Product / Engine

Product	Market Product	Engine
W50C TC CWL W50C TIER 4 XT [FNHW50CSNKHP01224 -]	North America	F5HFL463B*F001
W50C ZB CWL W50C TIER4 Z-BAR [FNHW50CSNKHP01224 -]	North America	F5HFL463B*F001
W70C CWL W70C TIER4 Z-BAR STD [FNHW70CSNKHP01220 -]	North America	F5HFL463A*F001
W70C HS CWL W70C TIER4 HIGH SPEED [FNHW70CSNKHP01220 -]	North America	F5HFL463A*F001
W80C CWL W80C TIER4 Z-BAR STD [FNHW80CSNKHP01219 -]	North America	F5HFL463A*F001
W80C HS CWL W80C TIER4 HIGH SPEED [FNHW80CSNKHP01219 -]	North America	F5HFL463A*F001

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.414] Fan and drive	10.3
Four-Wheel Drive (4WD) system	23
[23.314] Drive shaft.....	23.1
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
[27.124] Final drive hub, steering knuckles, and shafts	27.4
Hydrostatic drive.....	29
[29.218] Pump and motor components.....	29.1
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.204] Front axle brake.....	33.3
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3

[35.359] Main control valve	35.4
[35.525] Auxiliary hydraulic valves and lines	35.5
[35.600] High flow hydraulics	35.6
[35.353] Hydraulic travel system	35.7
[35.701] Front loader arm hydraulic system	35.8
[35.723] Front loader bucket hydraulic system	35.9
[35.734] Tool quick coupler hydraulic system	35.10
Frames and ballasting	39
[39.100] Frame	39.1
[39.140] Ballasts and supports	39.2
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.216] Cylinders	41.3
Cab climate control	50
[50.100] Heating	50.1
[50.200] Air conditioning	50.2
Electrical systems	55
[55.100] Harnesses and connectors.....	55.1
[55.301] Alternator.....	55.2
[55.512] Cab controls.....	55.3
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.4
[55.518] Wiper and washer system.....	55.5
[55.408] Warning indicators, alarms, and instruments	55.6
[55.DTC] FAULT CODES.....	55.7
Front loader and bucket.....	82
[82.100] Arm.....	82.1
[82.300] Bucket.....	82.2

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$