


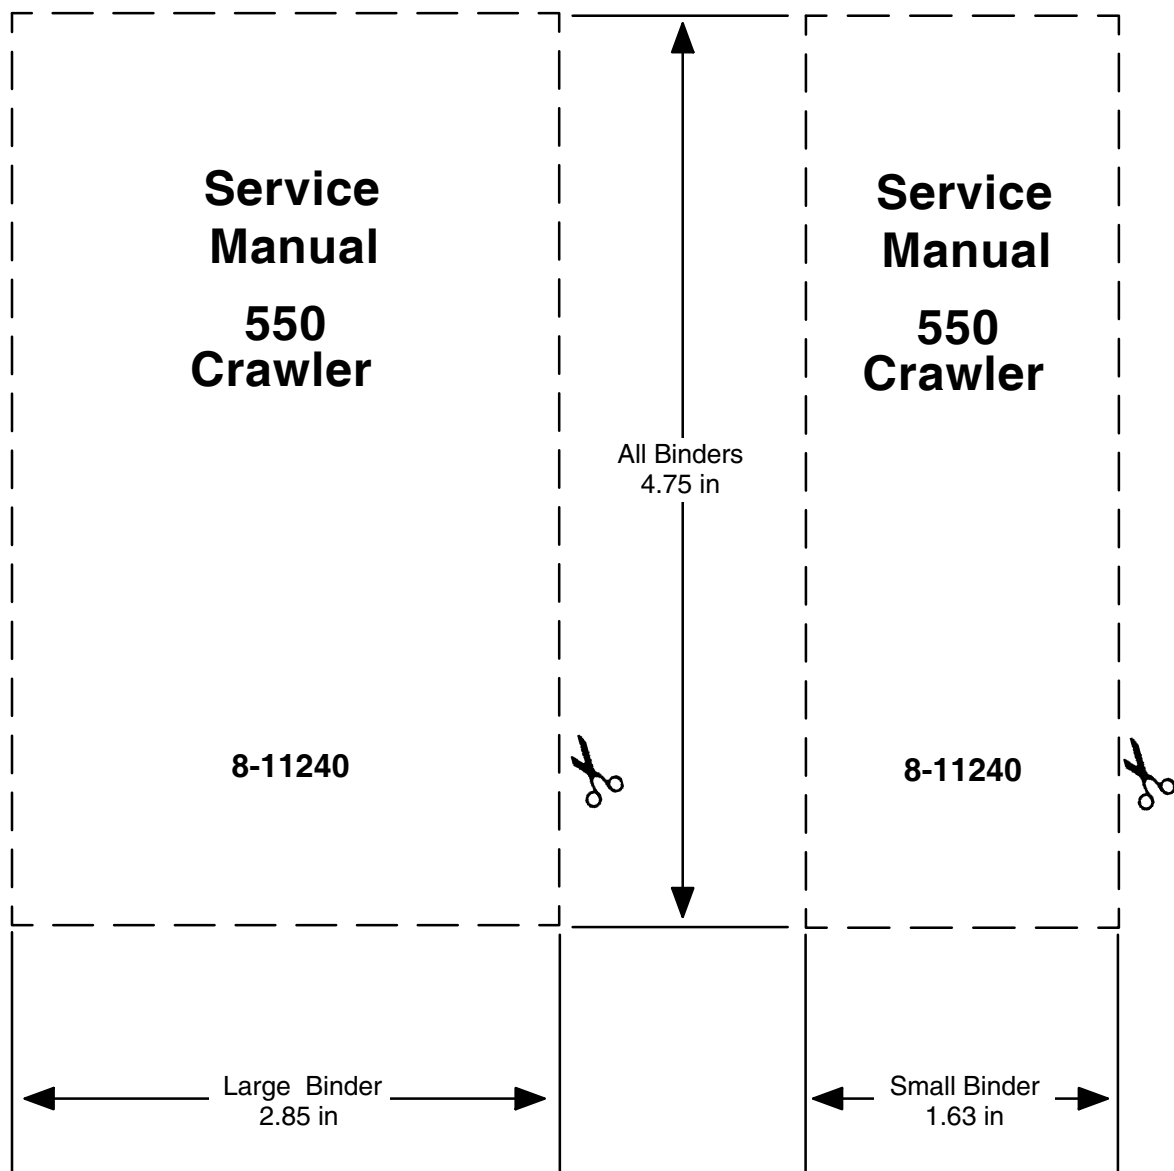

550 Crawler

Table of Contents

DIVISION/SECTION	SECTION NO.	FORM NO.
1 GENERAL		
Section Index - General		8-13600
Standard Torque Specifications.....	1001	8-71600
Fluids and Lubricants	1002	8-13610
Detailed Engine Specifications	1024	8-24161
ENGINE		
Section Index - Engine.....		8-13620
Stall Tests.....	2000	8-72232
Engine Removal and Installation	2001	8-72241
Cylinder Head and Valve Train.....	2415	8-24171
Cylinder Block	2425	8-24181
Lubrication System.....	2445	8-24191
Cooling System	2455	8-24201
3 FUEL SYSTEM		
Section Index - Fuel System		8-13630
Fuel System and Filters	3410	8-24211
Fuel Injection Pump and Drive Gear	3412	8-27080
Fuel Injectors.....	3413	8-24231
4 ELECTRICAL		
Section Index - Electrical		8-13641
Removal and Installation of Electrical Components.....	4001	8-13650
Specifications, Troubleshooting, and Schematics	4002	8-13660
Batteries	4003	8-11360
Instrument Panel and Gauges.....	4004	8-13670
Starter and Starter Solenoid.....	4006	8-42910
65 Amp Alternator A187873.....	4007	8-15670
65 Amp Alternator A186125.....	4019	8-12902
5 TRACK		
Section Index - Track		8-13681
Inspection of Track System Components	5501	8-15690
Case Lubricated Track.....	5504	8-13691
Sealed Track and Track Frame	5506	8-13701
Idler, Track Adjuster and Recoil Housing.....	5508	8-13710
Sprocket	5509	8-72571
Carrier Roller	5510	8-13730
Track Roller	5511	8-13740

6 POWER TRAIN

Section Index - Power Train		8-13751
Transmission Specifications and Troubleshooting Before P.I.N. JAK0013968	6002	8-13762
Transmission Specifications and Troubleshooting P.I.N. JAK0013968 and After	6003	8-15700
Charging Pump	6005	8-13770
Transmission Control Valve	6007	8-13810
Modulator Valve	6008	8-72611
Torque Converter Before P.I.N. JAK0013968	6010	8-13781
Torque Converter P.I.N. JAK0013968 and After	6011	8-17510
Transmission	6016	8-13791
Final Drive	6017	8-72650

7 BRAKES

Brakes	7001	8-13830
--------------	------	---------

8 HYDRAULICS

Section Index - Hydraulics		8-13840
Specifications, Troubleshooting and Schematics	8002	8-13851
Cleaning the Hydraulic System	8003	8-13860
Equipment Pump	8005	8-13870
Equipment Control Valve	8007	8-13880
Cylinders	8008	8-13890
Backhoe Control Valve	8107	8-13900
Stabilizer Control Valve	8109	8-13910

9 MOUNTED EQUIPMENT

Section Index - Mounted Equipment		8-13920
Pedals and Levers	9001	8-13950
Blade	9002	8-13930
Ripper	9031	8-72750
ROPS Canopy and Seats	9061	8-72770
Backhoe	9100	8-13940

SECTION INDEX - GENERAL

Section Title	Section Number
Standard Torque Specifications.....	1001
Fluids and Lubricants	1002
Detailed Engine Specifications	1024

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$