



**STX275/325/375/425/450/500
Steiger Tractors
P.I.N. JEE0102001 and After
Repair Manual 6-14443
Complete Table of Contents**

Description	Book Number	Section Number	Publication Number
Standard Torque Specifications	1	1000	6-14470
Safety	1	1001	6-14470
Engine Removal and Installation STX275 - STX325	1	2001	6-14470
Engine Removal and Installation STX375 through 450	1	2001	6-14470
Engine Air Induction System STX275 - STX325	1	2002	6-14470
Engine Air Induction System STX375 through 500	1	2002	6-14470
Viscous Fan Drive Test & Hydraulic Fan Drive Test - All Models	1	2003	6-14470
Electrical System How it Works and Troubleshooting	2	4001	6-14481
Starter Motor - Nippondenso STX275 - STX325	2	4002	6-14481
Starter Motor - Delco Remy STX375 through STX500	2	4002	6-14481
Battery Service and Testing	2	4003	6-14481
Alternator Testing and Repair (Bosch)	2	4004	6-14481
Steering Control Valve Removal/Installation (Standard)	3	5001	6-14490
Center Console, Steering Column, Pedals and Switches	3	5003	6-14490
Steering Column Repair	3	5004	6-14490
Steering Cylinders	3	5005	6-14490
Accusteer - Steering Control Unit Removal and Installation STX275 - STX325	3	5006	6-14490
Accusteer - How It Works, Calibration and Troubleshooting STX275 - STX325	3	5007	6-14490
Accusteer - Steering Cylinders with Linear Potentiometers STX275 - STX325	3	5008	6-14490
Steering Control Valve Repair STX275- STX325	3	5009	6-14490
Steering Control Valve Repair STX375 - STX500	3	5010	6-14490
PS-3 Powershift Transmission Removal and Installation STX275 - STX325	4	6001	6-14500
PS-3 Powershift Transmission Removal and Installation STX375 through STX500	4	6001	6-14500
Engine Transmission Drive Coupler Removal and Installation STX375 through STX500	4	6002	6-14500
Engine Transmission Drive Coupler Removal and Installation STX275 - STX325	4	6002	6-14500
16-Speed Powershift Transmission Disassembly/Assembly	4	6003	6-14500
Powershift Transmission System - How It Works	4	6004	6-14500
PTO Clutch Removal and Installation STX275 - STX325	4	6006	6-14500

Description	Book Number	Section Number	Publication Number
PTO Clutch Removal and Installation STX375 through STX500	4	6006	6-14500
PTO Drive Unit (Clutch) Repair	4	6007	6-14500
PTO Drive Unit Control System - How it Works	4	6008	6-14500
PTO Transfer Case Removal and Installation	4	6009	6-14500
PTO Dropbox Repair	4	6010	6-14500
Rear Drive Line and Carrier Bearing STX275 - STX325	4	6011	6-14500
Rear Drive Line and Carrier Bearing STX375 through STX500	4	6011	6-14500
PTO Drive Line Hanger Bearing	4	6012	6-14500
Charge Pump Repair (Transmission)	4	6013	6-14500
PTO Clutch Valve	4	6014	6-14500
Front Axle Removal and Installation STX275 - STX325	5	6015	6-14510
Front Axle Removal and Installation STX375 through STX500 (Wheel)	5	6015	6-14510
Rear Axle Removal and Installation STX275 - STX325	5	6016	6-14510
Rear Axle Removal and Installation STX375 through STX500 (Wheel)	5	6016	6-14510
Axle Repair STX275 - STX325	5	6017	6-14510
Front Axle Removal and Installation STX375 through STX450 (Quadtrac)	5	6017	6-14510
Rear Axle Removal and Installation STX375 through STX500 (Quadtrac)	5	6018	6-14510
Tracks Removal Installation STX375 through STX500 (Quadtrac)	5	6019	6-14510
Front and Rear Axle Repair STX375 through STX500 (Wheel) (Axle Model 500 and 510)	5	6020	6-14510
Front and Rear Axle Repair STX375 through STX500 For Quadtrac Tractors Prior to P.I.N. JEE0106701	5	6021	6-14510
Undercarriage and Drive Wheel Removal and Installation STX375 through STX500 (Quadtrac)	5	6022	6-14510
Undercarriage Repair STX375 through STX500 (Quadtrac)	5	6023	6-14510
Range Selector and Pressure Regulator Valve Repair (Transmission)	6	6024	6-14520
PS-3 Powershift Transmission - Pressure Testing and Troubleshooting	6	6025	6-14520
24 Speed Transmission - How It Works, Pressure Testing and Repair	6	6026	6-14520
24 Speed Transmission Removal and Installation	6	6027	6-14520
Front and Rear Axle Repair (Axle Model 400 and 410)	6	6028	6-14520
Front and Rear Axle Repair (Axle Model 500 and 510) For Quadtrac Tractors P.I.N. JEE0106701 and After	6A	6029	6-17810

Description	Book Number	Section Number	Publication Number
Brake System - How It Works	6	7001	6-14520
Service Brake Valve Removal and Repair	6	7002	6-14520
How To Read Symbols in a Hydraulic Schematic	7	8000	6-14530
Hydraulic Systems How it Works with Troubleshooting	7	8001	6-14530
Steering Priority Valve (High Output Hydraulic System)	7	8002	6-14530
Hydraulic Gear Pump & PFC Piston Pump Removal and Installation STX275 - STX325 (Accusteer)	7	8003	6-14530
PFC PISTON PUMP Removal and Installation STX375 through STX500	7	8003	6-14530
Hydraulic Gear Pump Removal and Installation STX375 through STX500	7	8004	6-14530
PFC Axial Piston Pump Repair	7	8005	6-14530
Hitch System - How It Works and Troubleshooting	7	8006	6-14530
Hitch Valve	7	8007	6-14530
Remote Hydraulic System (Electronic) How it Works and Troubleshooting	7	8008	6-14530
Remote Valve and Coupler Removal, Installation and Repair (Manual)	7	8009	6-14530
Axle Cooling/Lube System - How It Works and Troubleshooting	7	8010	6-14530
Steering Priority Valve (Standard Hydraulic System)	7	8012	6-14530
Hydraulic Filters	7	8013	6-14530
Remote Valve and Coupler Removal, Installation and Repair (Electronic)	7	8014	6-14530
Hydraulic Gear Pump & PFC Piston Pump Removal and Installation (Standard) STX275 - STX325	7	8015	6-14530
Remote Hydraulic System (Manual) How it Works and Troubleshooting	7	8016	6-14530
Charge Pump Repair	7	8017	6-14530
Hydraulic Fan and Motor Removal and Repair STX425 - STX500	7	8018	6-14530
A/C System - Troubleshooting	8	9001	6-14540
A/C Component Service	8	9002	6-14540
A/C System - Troubleshooting (P.I.N. JEE0106701 and After)	8A	9003	6-17570
Cab Removal and Installation	9	9006	6-14550
Hood Removal and Installation STX275 - STX325	9	9007	6-14550
Hood Removal and Installation STX375 through STX500	9	9007	6-14550
Radiator, Coolers and Condenser Removal and Installation STX275 - STX325	9	9008	6-14550
Radiator, Coolers and Condenser Removal and Installation STX375, 425, 450 and STX500	9	9008	6-14550
Hitch Cylinder Removal and Repair STX275 - STX325	9	9009	6-14550

Description	Book Number	Section Number	Publication Number
Center Hinge Bearings and Connecting Link STX275 - STX325	9	9010	6-14550
Center Hinge Bearings and Connecting Link STX375 through STX500	9	9010	6-14550
Deluxe Air Seat	9	9011	6-14550
Drawbar Removal and Replacement STX275 - STX325	9	9013	6-14550
Drawbar Removal and Replacement STX375 through STX500	9	9013	6-14550
Front Frame Hinge and Bearing STX275 - STX325 (Accusteer)	9	9014	6-14550
Cab Top Removal	9	9015	6-14550
Standard Instrumentation Programming and Fault Codes	10	10001	6-14560
Hitch Controller Calibration and Fault Codes	10	10002	6-14560
Transmission Controller Calibration and Fault Codes	10	10003	6-14560
Standard Instrumentation Programming and Fault Codes (P.I.N. JEE0106701 and After)	10A	10001	6-17580
Hitch Controller Calibration and Fault Codes (P.I.N. JEE0106701 and After)	10A	10002	6-17590
Transmission Controller Calibration and Fault Codes (P.I.N. JEE0106701 and After)	10A	10003	6-17600
Armrest Controller Calibration and Fault Codes	11	10004	6-14570
Remote Hydraulics Controller Fault Codes (Electronic)	11	10005	6-14570
Steering Controller and Fault Codes STX275 - STX325 (Accusteer)	11	10006	6-14570
Armrest Controller Calibration and Fault Codes (P.I.N. JEE0106701 and After)	11A	10004	6-17770
Remote Hydraulics Controller Fault Codes (Electronic) (P.I.N. JEE0106701 and After)	11A	10005	6-17770
Steering Controller and Fault Codes STX275 - STX325 (Accusteer) (P.I.N. JEE0106701 and After)	11A	10006	6-17770
Performance Monitor Controller Calibration Fault Codes	12	10008	6-14580
Electronic Service Tool Users Manual	12	10009	6-14580
AUX67 Controller Fault Codes	12	10010	6-14580

Service Information Packaged With 6-14443

A/C Temperature Pressure Poster - 7-90961

Electrical Schematic - 6-12250 and 6-12260 Prior to P.I.N. JEE0104001

Electrical Schematic - 6-17230 and 6-17240 P.I.N. JEE0104001 to JEE106700

Electrical Schematic - 87535256 and 87535258 P.I.N. JEE106701 and After

Hydraulic Schematic - 6-14280 Prior to P.I.N. JEE106701

Hydraulic Schematic - 87535262 P.I.N. JEE106701 and After

LOCTITE PRODUCT CHART

Product	Color	Similar Products	Gap (In Inches)	Strength (Steel/Steel)	Working Temperature Range-Fahrenheit	Fixture/Full Cure (Steel/Steel) Time	Primer	Description
#3	Dark Brown					24 hr	N/A	Form a Gasket (works with oil, fuel or grease) Pliable
80	Yellow					Fast	N/A	Weatherstrip Adhesive
123	Clear					N/A	N/A	Parts Cleaner Fluid
220	Blue	290	0.003	57/143 in lbs	-65 to +250	6 min/24 hrs	747	Wicking Threadlocker
221	Purple	222	0.005	75/44 in lbs	-65 to +300	2 min/24 hrs	747	Low Strength Threadlocker
222	Purple		0.005	53/30 in lbs	-65 to +300	20 min/24 hrs	764	Low Strength Threadlocker (Small Screws)
225	Brown	222	0.010	45/25 in lbs	-65 to +300	7 min/24 hrs	747	Low Strength Threadlocker
242	Blue		0.005	80/50 in lbs	-65 to +300	10 min/24 hrs	764	Medium Strength Threadlocker
262	Red	271	0.005	160/190 in lbs	-65 to +300	5 min/24 hrs	747	High Strength Threadlocker
270	Green	271	0.007	160/320 in lbs	-65 to +300	3 min/24 hrs	747	High Strength Threadlocker
271	Red	262	0.007	160/320 in lbs	-65 to +300	10 min/24 hrs	764	High Strength Threadlocker
272	Red	620	0.007	180/220 in lbs	-65 to +450	30 min/24 hrs	764	High Temperature, High Strength
275	Green	277	0.010	210/300 in lbs	-65 to +300	3 min/24 hrs	747	High Strength Threadlocker
277	Red		0.010	225/300 in lbs	-65 to +300	60 min/24 hrs	764	High Strength Threadlocker
290	Green		0.003	85/350 in lbs	-65 to +300	6 min/24 hrs	764	Wicking Threadlocker
*404	Clear	495	0.006	3200 psi	-65 to +180	30 sec/24 hrs	NA	Instant Adhesive
*406	Clear		0.004	3200 psi	-65 to +180	15 sec/24 hrs	N/A	Surface Insensitive Adhesive
*409	Clear	454	0.008	2500 psi	-65 to +180	50 sec/24 hrs	N/A	Gel Instant Adhesive
*414	Clear		0.006	2500 psi	-65 to +180	30 sec/24 hr	N/A	Instant Adhesive
*415	Clear	454	0.010	2500 psi	-65 to +180	50 sec/24 hrs	N/A	Gap Filling Instant Adhesive (Metals)
*416	Clear	454	0.010	2500 psi	-65 to +180	50 sec/24 hrs	N/A	Gap Filling Instant Adhesive (Plastics)
*420	Clear		0.002	2500 psi	-65 to +180	15 sec/24 hrs	N/A	Wicking Instant Adhesive
*422	Clear	454	0.020	2800 psi	-65 to +180	60 sec/24 hrs	N/A	Gap Filling Instant Adhesive
*430	Clear		0.005	2500 psi	-65 to +180	20 sec/24 hrs	N/A	Metal Bonding Adhesive
*445	White/Black		0.250	2000 psi	-65 to +180	5 min/24 hrs	N/A	Fast Setting 2 Part Epoxy
*454	Clear		0.010	3200 psi	-65 to +180	15 sec/24 hrs	N/A	Surface Insensitive Gen Instant Adhesive
*495	Clear		0.004	2500 psi	-65 to +180	20 sec/24 hrs	N/A	General Purpose Instant Adhesive
*496	Clear		0.005	2500 psi	-65 to +180	20 sec/24 hrs	N/A	Metal Bonding Adhesive
504	Brn Orange	515	0.030	750 psi	-65 to +300	90 min/24 hrs	None	Rigid Gasket Eliminator
509	Light Blue		0.020	750 psi	-65 to +320	6 hr/72 hrs	764	Flange Sealant
510	Red		0.020	1000 psi	-65 to +400	30 min/24 hrs	764	High Temperature, Gasket Eliminator
515	Purple		0.010	750 psi	-65 to +300	1 hr/24 hrs	764	Gasket Eliminator 515

Rac 8-98902 * Products 404-496 (except for #445) are all instant adhesives (super glues) they differ mostly in viscosity

Printed in U.S.A.

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$