

Shop Manual

WHEEL LOADER

GALEO

WA800-3E0

WA900-3E0

SERIAL NUMBERS

WA800-

70001

and up

WA900-

60001

and up

ecot3

KOMATSU

WHEEL LOADER

WA800-3E0
WA900-3E0

Machine model	Serial number
WA800-3E0	70001 and up
WA900-3E0	60001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02034-01
00 Index and foreword	SEN02035-01
Index	SEN02036-01 ●
Foreword and general information	SEN02037-01 ●
01 Specification	SEN02038-00
Specification and technical data	SEN02039-00
10 Structure, function and maintenance standard	SEN02040-00
Engine and cooling system	SEN02351-00
Power train, Part 1	SEN02352-00
Power train, Part 2	SEN02470-00
Steering system	SEN02353-00
Brake system	SEN02354-00
Undercarriage and frame	SEN02355-00
Hydraulic system, Part 1	SEN02356-00
Hydraulic system, Part 2	SEN02471-00
Work equipment	SEN02357-00
Cab and its attachments	SEN02358-00
Electrical system, Part 1	SEN02359-00
Electrical system, Part 2	SEN02360-00
Electrical system, Part 3	SEN02361-00
20 Standard value table	SEN02041-00
Standard service value table	SEN02154-00
30 Testing and adjusting	SEN02042-00
Testing and adjusting, Part 1	SEN02155-00
Testing and adjusting, Part 2	SEN02156-00
Testing and adjusting, Part 3	SEN02157-00
40 Troubleshooting	SEN02043-00
Failure code table and fuse locations	SEN02142-00
General information on troubleshooting	SEN02143-00
Troubleshooting by failure code (Display of code), Part 1	SEN02144-00

Troubleshooting by failure code (Display of code), Part 2	SEN02145-00
Troubleshooting by failure code (Display of code), Part 3	SEN02146-00
Troubleshooting by failure code (Display of code), Part 4	SEN02147-00
Troubleshooting by failure code (Display of code), Part 5	SEN02148-00
Troubleshooting by failure code (Display of code), Part 6	SEN02268-00
Troubleshooting of electrical system (E-mode)	SEN02149-00
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN02150-00
Troubleshooting of engine (S-mode)	SEN02151-00
Troubleshooting of machine monitor system (M-mode)	SEN02152-00
Troubleshooting of maintenance monitor system (K-mode)	SEN02153-00
 50 Disassembly and assembly	 SEN02044-00
General information on disassembly and assembly	SEN02739-00 ○
Engine and cooling system (SAA12V140E-3)	SEN02740-00 ○
Engine (SAA12V140E-3)	SEN02741-00 ○
Power train, Part 1	SEN02742-00 ○
Power train, Part 2 (Torque converter and transmission)	SEN02743-00 ○
Power train, Part 3 (Axle and final drive)	SEN02744-00 ○
Brake system	SEN02745-00 ○
Undercarriage and frame	SEN02746-00 ○
Hydraulic system	SEN02747-00 ○
Work equipment	SEN02748-00 ○
Cab and its attachments	SEN02749-00 ○
Electrical system	SEN02750-00 ○
 90 Diagrams and drawings	 SEN02045-00
Hydraulic diagrams and drawings	SEN02046-00
Electrical diagrams and drawings	SEN02047-00

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$