

HYDRAULIC EXCAVATOR

SHOP MANUAL

model

SK200(LC)-6E

SK210(LC)-6E

SK210NLC-6E

INDEX

1	SPECIFICATION SECTION
2	MAINTENANCE SECTION
3	SYSTEM SECTION
4	DISASSEMBLY SECTION
5	TROUBLESHOOTING
6	ENGINE SECTION
7	INSTALLATION PROCEDURES FOR OPTIONAL ATTACHMENT

SPECIFICATION

MAINTENANCE

SYSTEM

DISASSEMBLING

TROUBLESHOOTING

E/G

OPT.

KOBELCO

Book code No. S5YN0014E①

SK200(LC)-6E
SK210(LC)-6E
SK210NLC-6E

Index of Shop Manual

Book Code No. Distribution Year—Month			Index No	Title	
S5YN0114E 2002-06	S5YN0114E① 2003-11		SPECIFICATION	OUTLINE	YN01
S5YN0214E 2002-06	S5YN0214E① 2003-11			SPECIFICATION	YN02
S5YN0314E 2002-06	S5YN0314E① 2003-11			ATTACHMENT DIMENSION	YN03
S5YN1114E 2002-06	S5YN1114E① 2003-11		MAINTENANCE	TOOLS	YN11
S5YN1214E 2002-06	S5YN1214E① 2003-11			STANDARD MAINTENANCE TIME SCHEDULE	YN12
S5YN1314E 2002-06	S5YN1314E① 2003-11			MAINTENANCE STANDARD AND TEST PROCEDURE	YN13
S5YN2114E 2002-06	S5YN2114E① 2003-11		SYSTEM	MECHATRO CONTROL SYSTEM	YN21
S5YN2214E 2002-06	S5YN2214E① 2003-11			HYDRAULIC SYSTEM	YN22
S5YN2314E 2002-06	S5YN2314E① 2003-11			ELECTRICAL SYSTEM	YN23
S5YN2414E 2002-06	S5YN2414E① 2003-11			COMPONENTS SYSTEM	YN24
S5YN2514E 2002-06	S5YN2514E① 2003-11			AIR-CONDITIONER SYSTEM	YN25
—	—			—	
S5YN3114E 2002-06	S5YN3114E① 2003-11		DISASSEMBLING	DISASSEMBLING AND ASSEMBLING	YN31
S5YN3214E 2002-06	S5YN3214E① 2003-11			ATTACHMENT	YN32
S5YN3314E 2002-06	S5YN3314E① 2003-11			UPPER STRUCTURE	YN33
S5YN3414E 2002-06	S5YN3414E① 2003-11			TRAVEL SYSTEM	YN34
S5YN4114E 2002-06	S5YN4114E① 2003-11		TROUBLESHOOTING	MECHATRO CONTROL	YN41
S5YN4214E 2002-06	S5YN4214E① 2003-11			HYDRAULIC	YN42
S5YN4314E 2002-06	S5YN4314E① 2003-11			ELECTRICAL	YN43
S5YN4414E 2002-06	S5YN4414E① 2003-11			ENGINE	YN44
S5YN5114E 2002-06	S5YN5114E① 2003-11		E/G	ENGINE	YN51
S5YN6302E 2002-06	S5YN6302E① 2003-11		OPT	MOUNTING THE BREAKER AND NIBBLER & BREAKER	YN63
YN08-33001~ YQ08-04501~	YN08-33001~ YQ08-04501~ YN09-35146~ YQ09-04933~			APPLICABLE MACHINES	

WARNING

SAFETY

WARNING

The proper and safe lubrication and maintenance for this machine, recommended by KOBELCO are outlined in the OPERATION & MAINTENANCE GUIDE for this machine.

Improper performance of lubrication or maintenance procedures is dangerous and could result in injury or death. Read and understand the OPERATION & MAINTENANCE GUIDE before performing any lubrication or maintenance.

The serviceman or mechanic may be unfamiliar with many of the systems on this machine. This makes it important to use caution when performing service work. A knowledge of the system and or components is important before the removal or disassembly of any component.

Because of the size of some of the machine components, the serviceman or mechanic should check the weights noted in this Manual. Use proper lifting procedures when removing any components.

Following is a list of basic precautions that should always be observed.

1. Read and understand all Warning plates and decals on the machine before operating, lubricating or repairing this product.
2. Always wear protective glasses and protective shoes when working around machines. In particular, wear protective glasses when pounding on any part of the machine or its attachments with a hammer or sledge. Use welders gloves, hood / goggles, apron and other protective clothing appropriate to the welding job being performed. Do not wear loose-fitting or torn clothing. Remove all rings from fingers when working on machinery.
3. Disconnect battery and discharge any capacitors before starting to work on machine. Hang "Do Not Operate" tag in the Operator's Cab.
4. If possible, make all repairs with the machine parked on a level, hard surface. Block machine so it does not roll while working on or under machine.
5. Do not work on any machine that is supported only by lift jacks or a hoist. Always use blocks or jack stands to support the machine before performing any disassembly.

WARNING

Do not operate this machine unless you have read and understand the instructions in the OPERATORS MANUAL. Improper machine operation is dangerous and could result in injury or death.

6. Relieve all pressure in air, oil or water systems before any lines, fittings or related items are disconnected or removed. Always make sure all raised components are blocked correctly and be alert for possible pressure when disconnecting any device from a system that utilizes pressure.
7. Lower the bucket, blade, ripper or other attachment to the ground before performing any work on the machine. If this cannot be done, make sure the bucket, blade, ripper or other attachment is blocked correctly to prevent it from dropping unexpectedly.
8. Use steps and grab handles when mounting or dismounting a machine. Clean any mud or debris from steps, walkways or work platforms before using. Always face machine when using steps, ladders and walkways. When it is not possible to use the designed access system, provide ladders, scaffolds, or work platforms to perform safe repair operations.
9. To avoid back injury, use a hoist when lifting components which weigh 23 kg (50 lbs) or more. Make sure all chains, hooks, slings, etc., are in good condition and are in the correct capacity. Be sure hooks are positioned correctly. Lifting eyes are not to be side loaded during a lifting operation.
10. To avoid burns, be alert for hot parts on machines which have just been stopped and hot fluids in lines, tubes and components.
11. Be careful when removing cover plates. Gradually back off the last two bolts or nuts located at opposite ends of the cover or device and pry cover loose to relieve any spring or other pressure, before removing the last two bolts or nuts completely.
12. Be careful when removing filler caps, breathers and plugs on the machine. Hold a rag over the cap or plug to prevent being sprayed or splashed by liquids under pressure. The danger is even greater if the machine has just been stopped because fluids can be hot.

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$