

Technical Manual

Operational Principle

ZAXIS

210W-3

220W-3

Wheeled Excavator

ZAXIS210W-3 • 220W-3 WHEELED EXCAVATOR TECHNICAL MANUAL OPERATIONAL PRINCIPLE

 **Hitachi Construction Machinery Co., Ltd.**
URL:<http://www.hitachi-c-m.com>

Service Manual consists of the following separate Part No;
Technical Manual (Operational Principle) : Vol. No.TOCJB-E
Technical Manual (Troubleshooting) : Vol. No.TTCJB-E
Workshop Manual : Vol. No.WCJB-E

INTRODUCTION

TO THE READER

- This manual is written for an experienced technician to provide technical information needed to maintain and repair this machine.
- Be sure to thoroughly read this manual for correct product information and service procedures.
- If you have any questions or comments, at if you found any errors regarding the contents of this manual, please contact using “Service Manual Revision Request Form” at the end of this manual. (Note: Do not tear off the form. Copy it for usage.):
Publications Marketing & Product Support
Hitachi Construction Machinery Co. Ltd.
TEL: 81-29-832-7084
FAX: 81-29-831-1162

ADDITIONAL REFERENCES

- Please refer to the materials listed below in addition to this manual.
 - The Operator’s Manual
 - The Parts Catalog
 - The Engine Manual
 - Parts Catalog of the Engine
 - Hitachi Training Material


MANUAL COMPOSITION

- This manual consists of three portions: the Technical Manual (Operational Principle), the Technical Manual (Troubleshooting) and the Workshop Manual.
- Information included in the Technical Manual (Operational Principle):
technical information needed for redelivery and delivery, operation and activation of all devices and systems.
- Information included in the Technical Manual (Troubleshooting):
technical information needed for operational performance tests, and troubleshooting procedures.
- Information included in the Workshop Manual:
technical information needed for maintenance and repair of the machine, tools and devices needed for maintenance and repair, maintenance standards, and removal/installation and assemble/disassemble procedures.

PAGE NUMBER

- Each page has a number, located on the center lower part of the page, and each number contains the following information:

Example : T 1-3-5

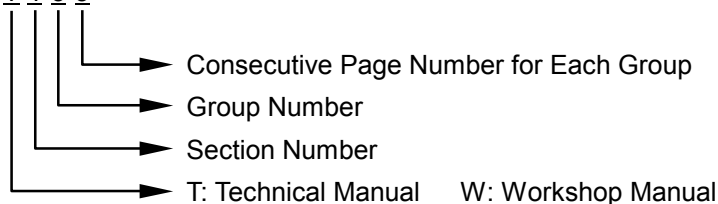

INTRODUCTION

SAFETY ALERT SYMBOL AND HEADLINE NOTATIONS

In this manual, the following safety alert symbol and signal words are used to alert the reader to the potential for personal injury or machine damage.

 This is the safety alert symbol. When you see this symbol, be alert to the potential for personal injury. Never fail to follow the safety instructions prescribed along with the safety alert symbol.

The safety alert symbol is also used to draw attention to component/part weights.

To avoid injury and damage, be sure to use appropriate lifting techniques and equipment when lifting heavy parts.

- **CAUTION:**

Indicated potentially hazardous situation which could, if not avoided, result in personal injury or death.

- **IMPORTANT:**

Indicates a situation which, if not conformed to the instructions, could result in damage to the machine.

- **NOTE:**

Indicates supplementary technical information or know-how.

UNITS USED

- SI Units (International System of Units) are used in this manual.

MKSA system units and English units are also indicated in parentheses just behind SI units.

Example : 24.5 MPa (250 kgf/cm², 3560 psi)

A table for conversion from SI units to other system units is shown below for reference purposes.

Quantity	To Convert From	Into	Multiply By	Quantity	To Convert From	Into	Multiply By
Length	mm	in	0.03937	Pressure	MPa	kgf/cm ²	10.197
	mm	ft	0.003281		MPa	psi	145.0
Volume	L	US gal	0.2642	Power	kW	PS	1.360
	L	US qt	1.057		kW	HP	1.341
	m ³	yd ³	1.308	Temperature	°C	°F	°C×1.8+32
Weight	kg	lb	2.205	Velocity	km/h	mph	0.6214
Force	N	kgf	0.10197		min ⁻¹	rpm	1.0
	N	lbf	0.2248	Flow rate	L/min	US gpm	0.2642
Torque	N·m	kgf·m	1.0197		mL/rev	cc/rev	1.0
	N·m	lbf·ft	0.7375				

SECTION AND GROUP CONTENTS

TECHNICAL MANUAL

(Operational Principle)

All information, illustrations and specifications in this manual are based on the latest product information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT(C)2007
Hitachi Construction Machinery Co., Ltd.
Tokyo, Japan
All rights reserved

SECTION 1 GENERAL

Group 1 Specification

Group 2 Component Layout

Group 3 Component Specifications

SECTION 2 SYSTEM

Group 1 Controller

Group 2 Control System

Group 3 ECM System

Group 4 Hydraulic System

Group 5 Electrical System

SECTION 3 COMPONENT OPERATION

Group 1 Pump Device

Group 2 Swing Device

Group 3 Control Valve

Group 4 Pilot Valve

Group 5 Electric Lever

Group 6 Transmission

Group 7 Axle

Group 8 Travel Motor

Group 9 Signal Control Valve

Group 10 Steering Valve

Group 11 Brake Valve

Group 12 Others (Upperstructure)

Group 13 Others (Undercarriage)

TECHNICAL MANUAL (Troubleshooting)

SECTION 4 OPERATIONAL PERFORMANCE TEST

Group 1 Introduction

Group 2 Standard

Group 3 Engine Test

Group 4 Excavator Test

Group 5 Component Test

SECTION 5 TROUBLESHOOTING

Group 1 Diagnosing Procedure

Group 2 Monitor Unit

Group 3 Dr. ZX

Group 4 ICF

Group 5 Component Layout

Group 6 Troubleshooting A

Group 7 Troubleshooting B

Group 8 Electrical System Inspection

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$